


INSTALLATION MANUAL

Full Motion LED, LCD TV Wall Mount

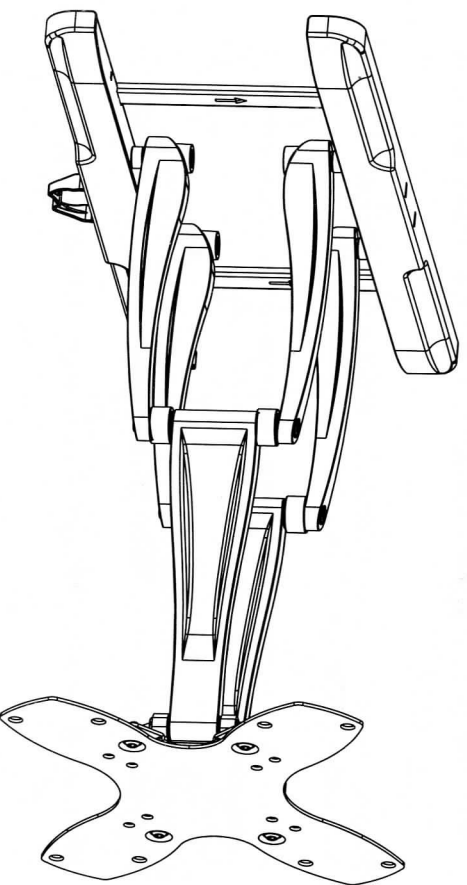

CAUTION: DO NOT EXCEED
RATED LISTED WEIGHT. SERIOUS
INJURY OR PROPERTY DAMAGE
MAY OCCUR!

LDA03-226



75x75/100x100
200x100/200x200



ISSUED: JAN. 2014


NOTE: Read the entire instruction manual before you start installation and assembly.

WARNING





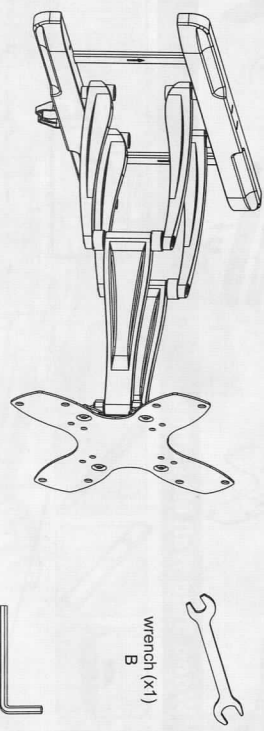


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist



IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.




Package M

- | | | | |
|--|--|---|--|
| 
M4x14 (x4)
M-A | 
M5x14 (x4)
M-B | 
M6x14 (x4)
M-C | 
M8x20 (x4)
M-D |
| 
D5 washer (x4)
M-E | 
D8 washer (x4)
M-F | 
small spacer (x8)
M-G | |



Package W

- | | | |
|---|--|--|
| 
ST6.3x55 (x6)
W-A | 
concrete anchor (x6)
W-B | 
D6 washer (x6)
W-C |
|---|--|--|

1. Separating the VESA Plate, Decorative Covers and Cable Clip

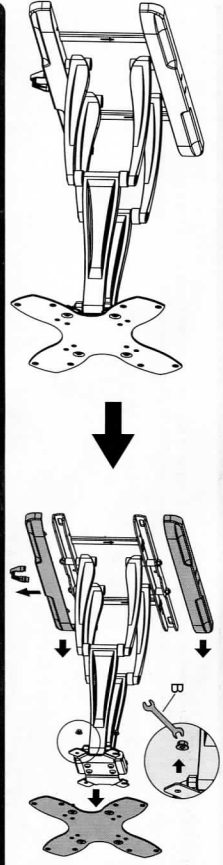

2a. For Wood Stud Wall Mounting

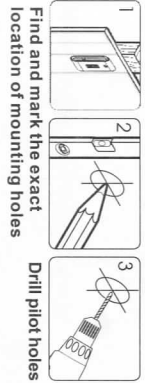 

Screw the wall mount onto the wall

With the arrow pointing up.





Model	Stud	406mm (16")	450mm (17.7")	600mm (23.6")	610mm (24")
LDA03-226		✓	✓	X	X



WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

    2b. For Solid Brick and Concrete Mounting




Drill pilot holes



Screw the wall mount onto the wall


With the arrow pointing up.

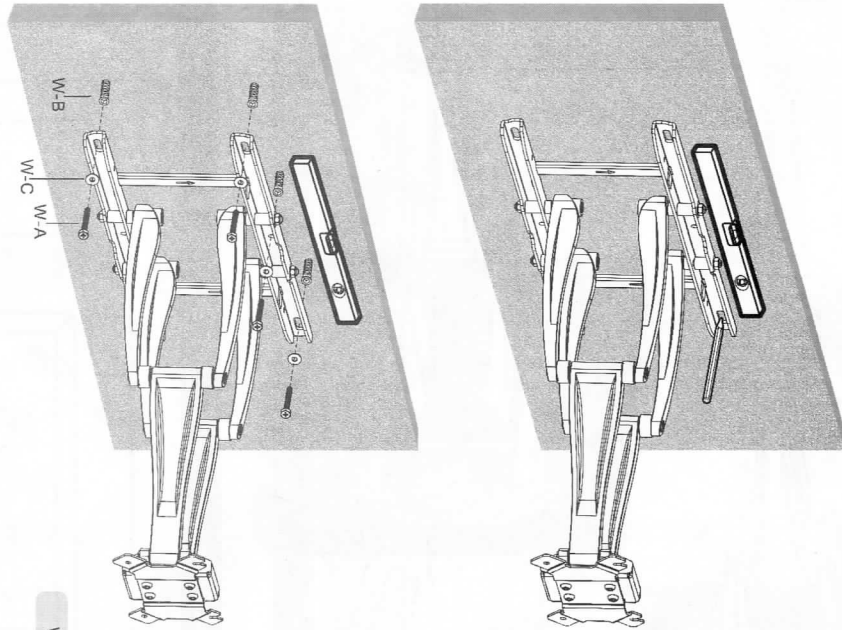



WARNING

- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

3. Installing the Decorative Covers and Cable Clip

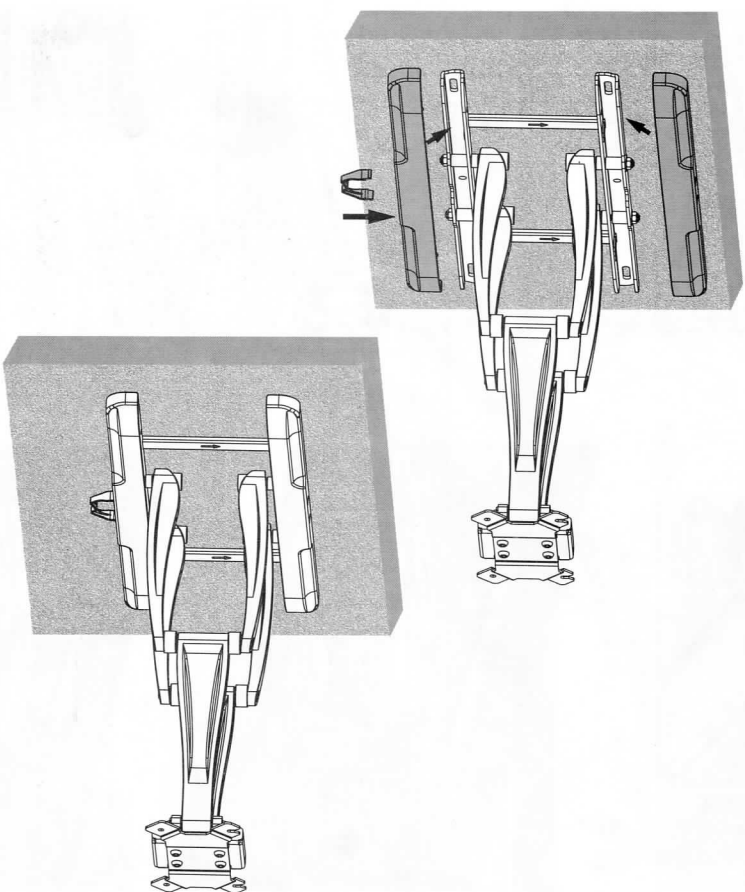


4. Installing the VESA Plate

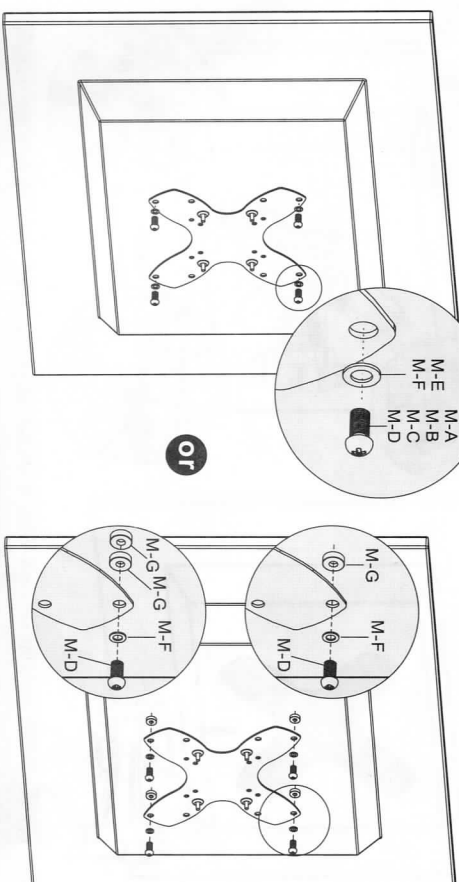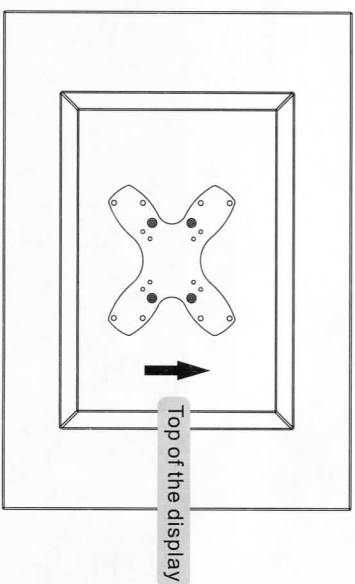


Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen. Screw the VESA plate onto the display. **Tighten all screws but do not over tighten.**

5. Installing the Display

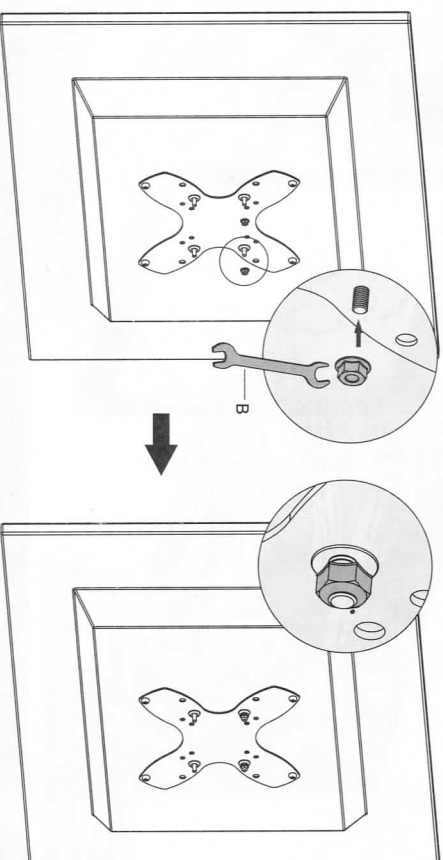


Install the both nuts to the upper rivets on the VESA plate and tighten the nuts leaving some space from the VESA plate.

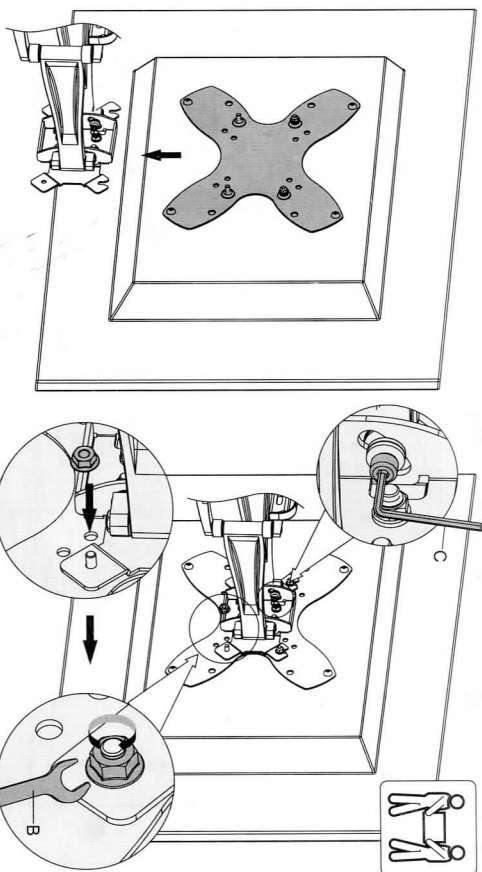

- Lift your display and make the nuts and rivets fit into the mount head holes. Install the both remaining nuts to the lower rivets and tighten all nuts with the wrench.
- Tension is already pre-set at the factory. If it's too tight or too loose, you may adjust the tension by loosening or tightening the adjustment bolts.

6. Adjustment

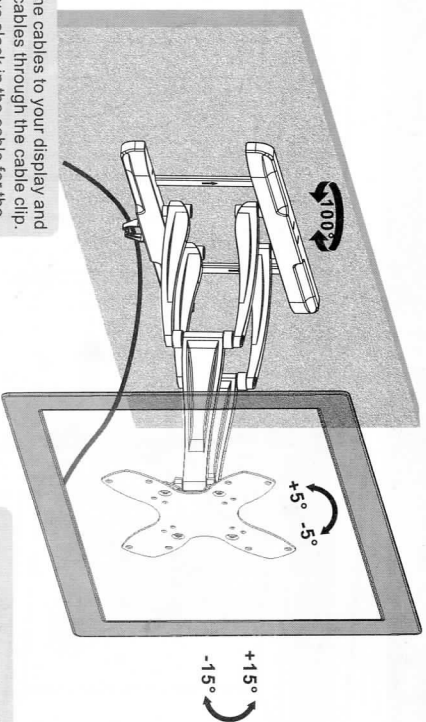

Connect the cables to your display and route the cables through the cable clip.
Note: Leave slack in the cable for the cantilever arm movement.

Adjust to the desired position or tilt.

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.