

Parts list AZ-P1 OR 9x19

C.	Name		C.	Name	
1	AZ-P1 Standard Frame	22-P1-101-01-02-00	48	Firing pin longer lock	22-P1-200-06-01-01
2	Backstrap AZ-P1	22-P1-100-02-03-00	49	Firing pin spring longer	22-P1-200-07-01-00
3	Sport - magazine catch	22-P1-100-03-00-00	50	Block fuse	22-P1-200-08-00-00
4	9mm magazine catch pin	22-P1-100-04-00-00	51	Block fuse spring	22-P1-200-09-00-00
5	Magazine catch spring	22-P1-100-05-00-00	52	Buffer	22-P1-200-10-00-00
6	Trigger block	22-P1-100-06-00-00	53	Recoil spring Standard 150	22-P1-200-11-00-00
7	DA trigger screw M3x5	22-P1-100-07-00-00	54	Recoil spring rod	22-P1-200-12-00-00
8	Trigger Standard SA/DA	22-P1-100-08-00-00	55	Front sight	22-P1-200-13-00-00
9	Standard trigger spring	22-P1-100-09-00-00	56	Spiral extractor pin 2.5x10	22-P1-200-05-01-00
10	Slide catch	22-P1-100-10-00-00	57	Spring pin front sight 1.5x10	22-P1-200-15-00-00
11	Slide catch spring	22-P1-100-12-00-00	58	9mm SFMeccanica magazine	22-P1-900-00-05-00
12	Trigger pin	22-P1-100-14-00-00	59	Plastic tray feeder SFMeccanica	
13	DA trigger bar	22-P1-100-15-00-00	60	SFMeccanica magazine spring	
14	Trigger spring	22-P1-100-16-00-00	61	Tray bottom insert	
15	Ejector	22-P1-100-17-00-00	62	Bottom of the magazine 17	22-P1-900-05-04-00
16	Hammer catch	22-P1-100-18-03-00	63	Sight base	22-P1-200-17-00-00
17	Hammer catch screw M3x5	22-P1-100-19-00-00	64	Zendl rear sight	22-P1-200-14-01-00
18	Ejector screw M2.5x6	22-P1-100-22-00-00	65	Torx screw for sight base M3x6	22-P1-200-20-00-00
19	Hammer catch pin	22-P1-100-21-00-00			
20	Lock lever	22-P1-100-20-00-00			
21	DA Hammer	22-P1-100-23-00-00			
22	Hammer pin	22-P1-100-24-00-00			
23	Main spring guide rod	22-P1-100-25-00-00			
24	Main spring guide rod pin 2.5h6x8	22-P1-100-26-00-00			
25	Main spring	22-P1-100-27-00-00			
26	Hammer catch spring	22-P1-100-28-00-00			
27	Hammer cock catch spring pin	22-P1-100-29-00-00			
28	Front block pin 2.5x24	22-P1-100-31-00-00			
29	Rear block pin 2.5x22	22-P1-100-30-00-00			
30	Disassembling pin	22-P1-100-32-00-00			

31	Disassembling pin spring	22-P1-100-33-00-00			
32	Left safety	22-P1-100-34-00-00			
33	Right safety	22-P1-100-35-00-00			
34	Fuse latch	22-P1-100-36-00-00			
35	Fuse latch spring	22-P1-100-37-00-00			
36	Safety pin 1.5x16	22-P1-100-38-00-00			
37	Left grip AZ-P1	22-P1-101-39-00-00			
38	Right grip AZ-P1	22-P1-101-40-00-00			
39	Grip screw Torx M4x5	22-P1-100-50-00-00			
40	Spring trigger bar pin 1.5x10	22-P1-100-47-00-00			
41	DA trigger screw M3x5	22-P1-100-07-00-00			
42	Backstrap pin	22-P1-100-49-00-00			
43	9mm Slide Optics	22-P1-200-01-01-0A			
44	Barrel 9mm	22-P1-200-02-00-00			
45	9x19 Extractor	22-P1-200-03-05-00			
46	Extractor spring	22-P1-200-07-01-00			
47	Spiral firing pin 2.5x18	22-P1-200-16-02-00			