

Parts list AZ-P1 Super OR 9x19

C.	Name		C.	Name	
1	Sport Frame	22-P1-100-01-00-00	48	Firing pin longer	22-P1-200-06-01-01
2	Backstrap Sport/Super Magwel 2	22-P1-100-02-03-00	49	Firing pin spring II soft	22-P1-200-07-01-00
3	Magazine catch - Sport	22-P1-100-03-00-00	50	Block fuse	22-P1-200-08-00-00
4	9mm magazine catch pin	22-P1-100-04-00-00	51	Block fuse spring	22-P1-200-09-00-00
5	Magazine catch spring	22-P1-100-05-00-00	52	Buffer II	22-P1-200-10-00-00
6	Trigger block	22-P1-100-06-00-00	53	Recoil spring Standard 15cm	22-P1-200-11-00-00
7	Sliding trigger base SA	22-P1-108-01-00-00	54	Recoil spring rod	22-P1-200-12-00-00
8	SA/DA slide trigger tab	22-P1-108-02-00-00	55	Front sight	22-P1-200-13-00-00
9	Standard trigger spring	22-P1-100-09-00-00	56	Sight base	22-P1-200-17-01-00
10	Slide catch	22-P1-100-10-00-00	57	Spring pin front sight 1.5x10	22-P1-200-15-00-00
11	Slide catch spring	22-P1-100-12-00-00	58	9 mm SFMeccanica magazine	22-P1-900-00-05-00
12	Trigger pin	22-P1-100-14-00-00	59	Plastic tray feeder SFMeccanica	
13	SA trigger bar	22-P1-100-15-01-02	60	SFMeccanica magazine spring	
14	Trigger bar spring	22-P1-100-16-00-00	61	Ejector screw M2.5x6	22-P1-100-22-00-00
15	Ejector	22-P1-100-17-00-00	62	Floorplate +2	22-P1-900-07-00-00
16	Hammer catch	22-P1-100-18-03-00	63	Floorplate screw +2 M3x6	22-P1-900-06-00-00
17	Hammer catch screw M3x5	22-P1-100-19-00-00	64	Trigger screw SA M3x6 safety tooth	22-P1-100-07-01-00
18	Optics extractor spiral pin 2.5x10	22-P1-200-05-01-00	65	Trigger screw SA spring M3x4	22-P1-100-07-02-00
19	Hammer catch pin	22-P1-100-21-00-00	66	Trigger screw SA M3x5 tab	22-P1-100-07-03-00
20	Lock lever	22-P1-100-20-00-00	67	Torx screw for rear sight M3x6	22-P1-200-20-00-00
21	SA hammer	22-P1-100-23-05-00	68	Zendl rear sight	22-P1-200-14-01-00
22	Hammer pin	22-P1-100-24-00-00			
23	Main spring guide rod – series II	22-P1-100-25-01-00			
24	Main spring guide rod pin 2.5h6x8	22-P1-100-26-00-00			
25	Main spring II	22-P1-100-27-01-00			
26	Hammer catch spring	22-P1-100-28-00-00			

27	Hammer catch spring pin	22-P1-100-29-00-00			
28	Front block pin 2.5x24	22-P1-100-31-00-00			
29	Rear block pin 2.5x22	22-P1-100-30-00-00			
30	Disassembling pin	22-P1-100-32-00-00			
31	Disassembling pin spring	22-P1-100-33-00-00			
32	Left safety	22-P1-100-34-00-00			
33	Right safety	22-P1-100-35-00-00			
34	Fuse latch	22-P1-100-36-00-00			
35	Fuse latch spring	22-P1-100-37-00-00			
36	Spiral safety pin 1.5x16	22-P1-100-38-00-00			
37	Left grip Super	22-P1-100-39-02-00			
38	Right grip Super	22-P1-100-40-02-00			
39	Grip screw Torx M4x5	22-P1-100-50-00-00			
40	Trigger bar spring pin 1.5x10	22-P1-100-47-00-00			
41	Trigger screw SA flat free movement M3x6	22-P1-100-07-01-00			
42	Backstrap pin	22-P1-100-49-00-00			
43	9mm Slide Optics lock	22-P1-200-01-01-0A			
44	Barrel 9mm	22-P1-200-02-00-00			
45	9x19 Extractor	22-P1-200-03-05-00			
46	Extractor spring soft	22-P1-200-04-00-00			
47	Spiral pin for firing pin, lock 2.5x18	22-P1-200-16-02-00			