

S I G H T  M A R K[®]

USER MANUAL



Quick Detach 30mm / 1 inch Mounts

SM34002 and SM34003

ABOUT SIGHTMARK®

Sightmark offers a wide range of products that include red dot scopes, reflex sights, rangefinders, riflescopes, laser sights, night vision and award-winning flashlights and boresights. Sightmark products are inspired by military and law enforcement applications. All products are designed to be the most effective weapon accessories possible.


Sightmark - MAKE YOUR MARK

S I G H T  M A R K®

www.sightmark.com

Quick Detach Mount 1-4

English

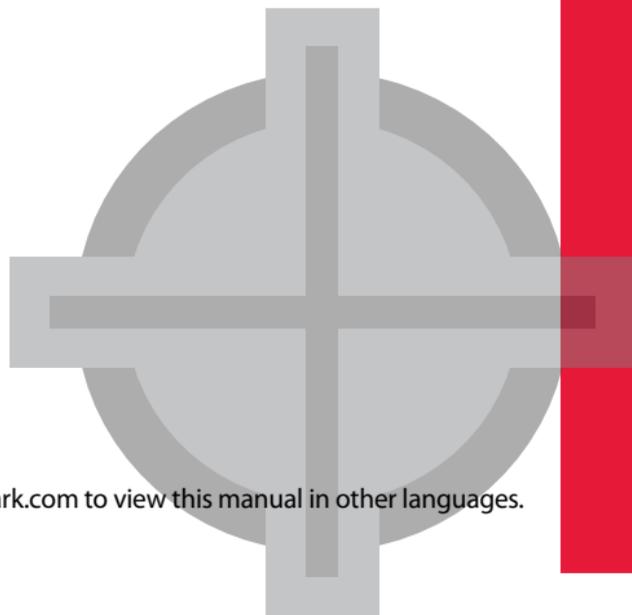

*Visit our website at www.sightmark.com to view this manual in other languages.

ENGLISH



FEATURES:

- Quick detach weaver/picatinny mount
- Reliable and durable
- Lightweight
- Provides return to zero after removal

INCLUDED ACCESSORIES:

- Reduction inserts for 1 inch diameter

TECHNICAL SPECIFICATIONS:

Material	Aluminum	Aluminum
Finish/color	Matte black	Matte black
Mount type	Weaver/picatinny	Weaver/picatinny
Centerline height	35mm/1.4in	27mm/1.1in
Dimensions	62x55x56mm	62x55x48mm
Weight	3oz	3.1oz

DIAGRAM:

1. 30mm mount
2. Quick detach lever
3. 1 inch reduction rings



WARNING

Before handling the Quick Detach Mount, read and understand the contents of your firearm's manual and the Sightmark Quick Detach Mount Manual. Follow all standard safety precautions and procedures during firearm operation, even when the mount is not in use.

- Avoid dropping the unit
- ALWAYS check that the chamber of your weapon is clear before mounting or dismounting.
- ALWAYS remove the reflex sight when cleaning, or performing other maintenance on your firearm.
- The mount should be tested during periods of non-use to make sure it is still operating properly. Failure to follow standard firearm safety precautions and procedures, as well as the above warnings, is dangerous and may result in serious injury, damage to property, or death.

MOUNTING A RIFLESCOPE, FLASHLIGHT, OR OTHER ACCESSORY:

The Sightmark Quick Detach mounts can be mounted on 30mm or 1 inch diameter riflescopes, flashlights, or lasers. For 1 inch diameter accessories, the reduction rings (3) must be used.

1. Using the hex wrench, loosen the six set screws on the 30mm mount (1).
2. Remove the top part of the mount and if not needed, remove the 1 inch reduction rings.
3. Next, insert the rifle scope, flashlight, or laser.
4. Reattach the top part of the mount and tighten the hex screws.

MOUNTING TO YOUR FIREARM:

1. Release the quick detach lever (2).
2. Position the mount onto your firearm's weaver or picatinny mount. Align the crossbolt of the mount between the grooves on the weaver or picatinny mount.
3. Flip the quick-detach lever (2) until it firmly snaps into position.

*If the quick detach lever is difficult to engage or the mount has play or is shifting, adjusting the mount's width is required. See adjusting the quick detach mount.

ADJUSTING THE QUICK DETACH MOUNT:

1. Release the quick detach mount (2).
2. To tighten the mount, rotate the lever clockwise. To loosen the mount, rotate the lever counter-clockwise.
3. Reattach the mount to the firearm for a secure fit. Repeat steps 1 and 2 if necessary.

MAINTENANCE:

The mount may be cleaned with a soft cloth and gun oil when exposed to dirt and dust. Cleaning the mount regularly with gun oil will remove rust and allow the flip-to-side mechanism to function smoothly.

SIGHTMARK LIMITED LIFETIME WARRANTY

Please visit www.sightmark.com for warranty details and information.

S I G H T  M A R K[®]

www.sightmark.com