



OUTDOOR REMOTE CONTROL SET
1 REMOTE + 3 SOCKETS
16A, MAX. LOAD: 3680 WATT

USER MANUAL
GEbruikSAANWIJZING
MANUEL D'UTILISATION
BENUTZERHANDBUCH

Art. No. 8501000700

Lyonstraat 29, 3047 AJ Rotterdam
The Netherlands
Electro Cirkel Retail B.V.

WWW.CALEX.EU

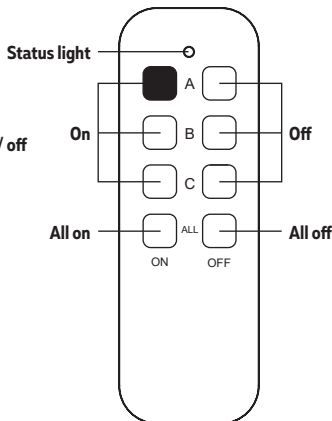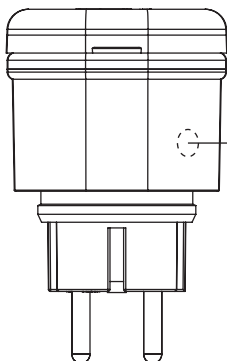

Radio Equipment Directive for Remote

Operating frequency band: 433.92 MHz

Max . Power: <10mW (PAR)

Pairing the sockets to the remote control

1. Plug the remote control socket into an outlet.
2. Press and hold the on/off button till the indicator starts to flash slowly.
3. Press the 'A-ON' button of the remote control. Once the indicator light on socket no longer flashes, the remote controller has been successfully paired.

Repeat steps 1, 2 and 3 to pair the other socket(s)

Using the remote controller

The remote sockets can be controlled individually or as a group using the On, off, all on and all off buttons.

To turn sockets on or off without the remote controllers, press the on / off button twice.

Unpairing

Press and hold the on/off button of the remote control till the indicator light changes from slow flashing to fast flashing (this takes about 20 seconds), release the on/off button when the indicator light goes out. The device memory is now cleared.