

**CALEX**  
H O L L A N D

**VISTA**

# OUTDOOR PARTY LIGHTS 10 METER



## User Manual

DE	Benutzerhandbuch	LT	Vartotojo vadovas
BG	Ръководство за потребителя	LV	Lietotāja rokasgrāmata
CZ	Uživatelská příručka	NL	Gebruikershandleiding
DK	Brugervejledning	NO	Brukerhåndbok
EE	Kasutusjuhend	PL	Podręcznik użytkownika
ES	Manual del usuario	PT	Manual do utilizador
FI	Käyttäjän käsikirja	RO	Manual de utilizare
FR	Manuel d'utilisation	SE	Användarmanual
GR	Εγχειρίδιο χρήστη	SI	Uporabniški priročnik
HR	korisnički priručnik	SK	Používateľská príručka
HU	Felhasználói kézikönyv	TR	Kullanıcı Kılavuzu
IT	Manuale d'uso		

**Art. No. 4301005300**


EN User Manual	5	(EU)
DE Benutzerhandbuch	6	(D)
BG ръководство за потребителя	7	(CZ)
CZ Užívateľská príručka	8	(BG)
DK Brugervejledning	9	(DK)
EE Kasutusjuhend	10	(EST)
ES Manual del usuario	11	(ES)
FI Käyttäjän käsikirja	12	(FIN)
FR Manuel d'utilisation	13	(F) (B)
GR Εγχειρίδιο χρήστη	14	(GR)
HR Felhasználói kézikönyv	15	(HR)
HU Felhasználói kézikönyv	16	(HU)
IT Manuale d'uso	17	(I)
LT Vartotojo vadovas	18	(LT)
LV Lietotāja rokasgrāmata	19	(LV)
NL Gebruikershandleiding	20	(NL) (B)
NO Brukerhåndbok	21	(N)
PL Podręcznik użytkownika	22	(PL)
PT Manual do utilizador	23	(PRT)
RO Manual de utilizare	24	(RO)
SE Användarmanual	25	(S)
SI Uporabniški priročnik	26	(SLD)
SK Používateľská príručka	27	(SK)
TR Kullanıcı Kılavuzu	28	(TR)

Electro Cirkel Retail B.V.  
 Lyonstraat 29  
 3047 AJ Rotterdam  
 The Netherlands

Calex Smart Home UK Ltd.  
 20 Gresham Street London  
 EC2V 7JE United Kingdom

WWW.CALEX.EU


---

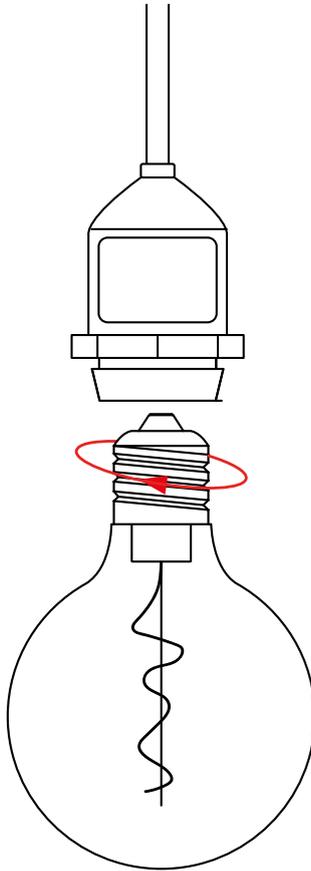

Important: screw the bulbs into the socket counterclockwise to ensure proper installation. Only replace bulbs with the same type.

## Technical data

Voltage	Lumen per Bulb	Total Length	Bulb Type + Fitting	Color Temperature	IP- Rating	Extendable
12V 12W	45LM	10 meter	G95 - E27	2700K	IP44	Yes, max 2 sets

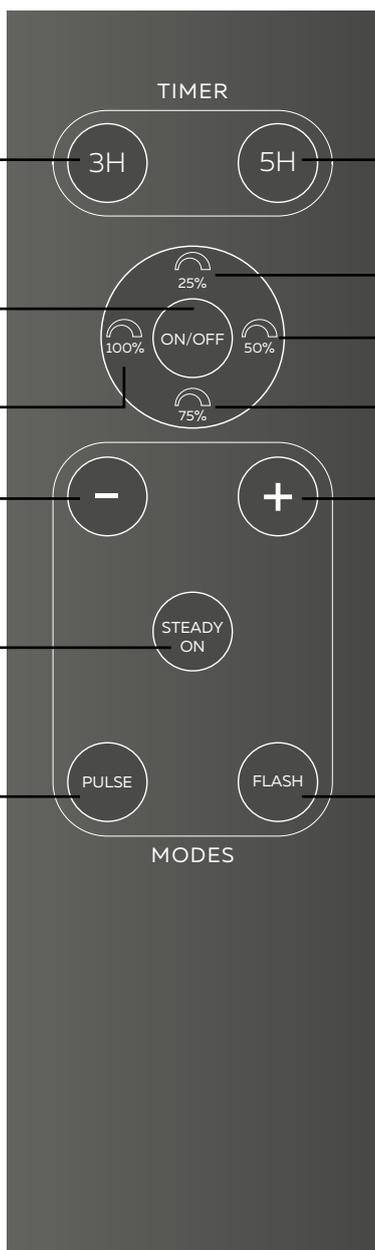

1

2

3

4

5

7

6

8

9

10

11

12

## Installation

When this product is used outdoors, connect this product to a ground fault circuit interrupter (GFCI) outlet. If not present, contact a certified electrician for proper installation. Expandable up to three sets. Protect connection(s) from direct exposure to rain and water.

## Replacement

To replace bulbs (one spare bulb included): disconnect power at the source prior to servicing. Bulbs must be screwed counterclockwise into the socket to ensure proper installation. Only replace bulbs with the same type.

## Remote control settings

- 1** Press the button to adjust the product to a 3-hour timer mode, and the product will turn off after 3 hours.
- 2** Press the button to adjust the product to a 5-hour timer mode, and the product will turn off after 5 hours.
- 3** In constant light mode, press the button once to turn off the product, then press the button again to turn on the product
- 4** In static mode, press the button to adjust the brightness to 25%
- 5** In static mode, press the button to adjust the brightness to 50%
- 6** In static mode, press the button to adjust the brightness to 75%
- 7** In static mode, press the button to adjust the brightness to 100%
- 8** Press the button, and the mode slows down
- 9** Press the button, and the mode speed up
- 10** Press the button, the product will enter a static constant light state from other modes
- 11** Press the button, the color of the product changes from dark to bright
- 12** Press the button, the product will flash rapidly and intermittently

The remote control uses 2x AAA batteries (LR03 1.5V, not included), and is on automatic standby mode when not in use. Normally the batteries can be used for more than six months. The batteries can be replaced by the same type.

## Memory function

The party lights will remember the last setting before being switched off and continue in that setting when switched back on.

## More information

See the website [help.calex.eu](http://help.calex.eu) for more information on safety, warranty and disposal.