

POWER VISION 4

Installation Guide for: PV4-15-04

Model Coverage:
Gen 2 Harley-Davidson Motorcycles

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION




IPV4-15-04.03




INTRODUCTION

Blue LED—Bluetooth Status
On is connected to Bluetooth.
Off is not connected.

Green LED—Power
Short blink is power.
Long blink is connected to ECU.

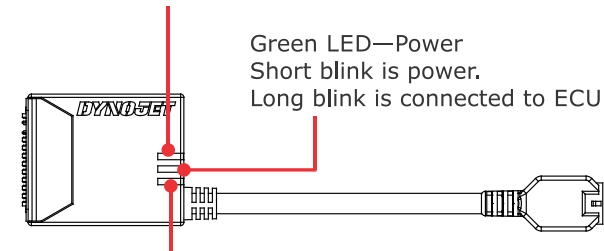

 Red LED—Communication
Solid red is communication on bus.
Rapid flashing is recovery mode.



PV4-15-04: 76951076 H-D Euro5
Reflash Harness

Thank you for purchasing the Power Vision 4 (PV4) from Dynojet Research. The Power Vision 4 is the most flexible and powerful flash tuner in the world. The Power Vision 4 uses reflash technology to change the parameters inside the stock Engine Control Module (ECM) that affects the way the engine will run.


The Power Vision 4 has three indicator lights:

- Red LED—Communication. Solid red is communication on bus; rapid flashing is recovery mode.
- Green LED—Power. Short blink is power; long blink is connected to ECU.
- Blue LED—Bluetooth status. On is connected to Bluetooth; off is not connected.

After the vehicle has been flashed, the Power Vision 4 does not need to remain connected to have full benefits of the device.

For state of the art technical support, please visit <https://www.dynojet.com/help-center>.

LOCATING THE DIAGNOSTIC CONNECTOR

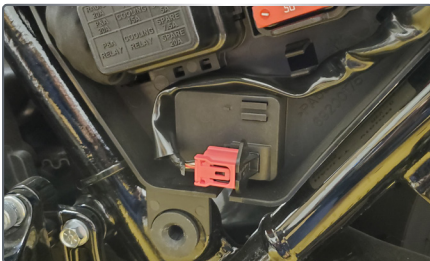

Touring Models

The diagnostic connector is located behind the left hand side cover. This connector is red, 6-pin. Requires removing the left saddle bag.



Softail Models


The diagnostic connector is located behind the left hand side cover. This connector is red, 6-pin.

GETTING STARTED


- 1 Download and install the Dynojet Power Vision 4 app from the Apple App or Google Play Store.
- 2 Sign in to continue. Don't have an account yet? Press **Sign Up** and follow the on-screen prompts.
- 3 Connect the Power Vision to the vehicle diagnostic port.
- 4 Turn the ignition switch to the ON position and the run switch to the RUN position, but do not start the vehicle.

- 5 Press **Scan**.
- 6 Verify Bluetooth and Location are enabled.
Location permission is required for the app to access the phone's Bluetooth hardware.


- 7 Press **Identify** to briefly illuminate the blue LED on your Power Vision 4.
- 8 Select the Dynojet PV4.
- 9 Before you continue, you will be prompted to update the firmware. Press **OK** to update the firmware.

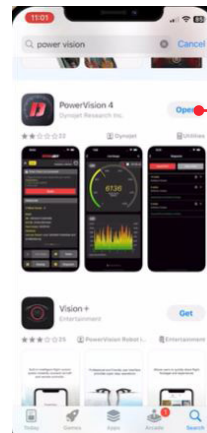


Install
Power
Vision 4
app

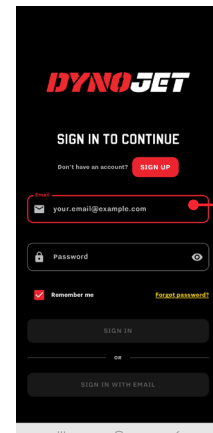


Sign in

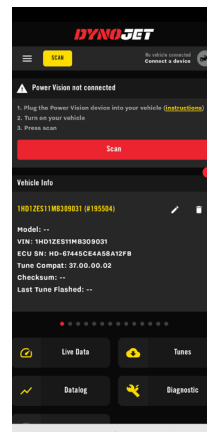


Scan for PV4

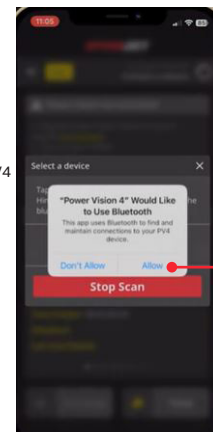

Allow Bluetooth

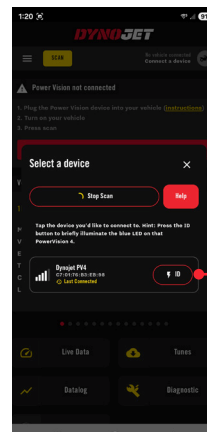


Identify
and select
the PV4

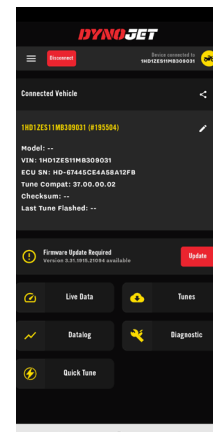


Update the
firmware

GETTING STARTED CONTINUED

10 Press the **Pencil** to edit the vehicle name. Press **Save** to save.

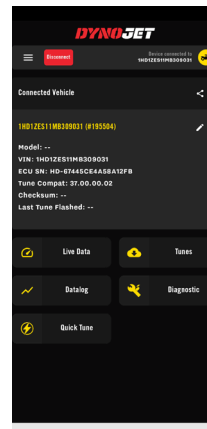

Edit pencil

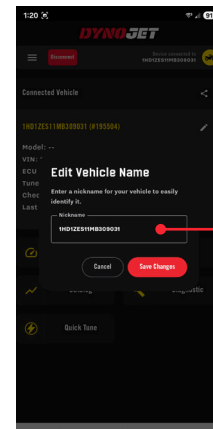

Name the stock file

11 Press **Tunes**.


Note: The first time you connect to a vehicle you will need to perform a one-time ECU Prep Flash.

Note: The battery must be fully charged or on a charger.

12 Press **Yes** to proceed with the installation.


13 Verify your battery is fully charged or connected to a battery charger.

14 Press **Begin**.

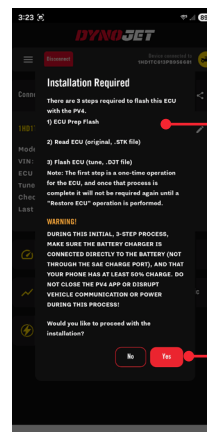

First time connections will need to perform one-time ECU Prep Flash


Yes to continue

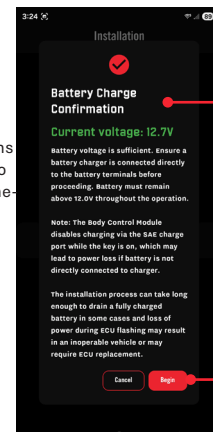



Battery charge confirmation

Begin installation

15 Once the installation is complete, turn the key off or place the run switch in the off position. Once the vehicle is powered off, please wait 30 seconds to reset the ECU. Installation is complete. You may now flash a tune!

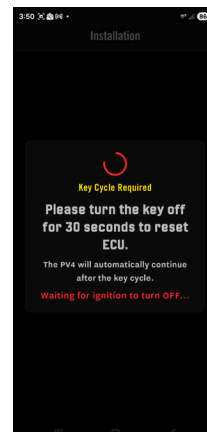

Key off for 30 seconds

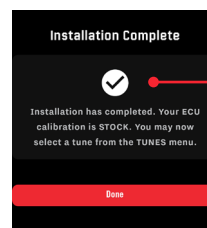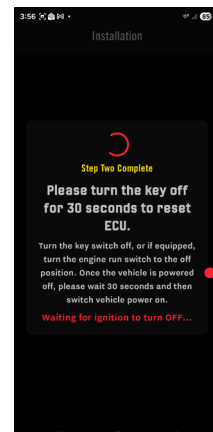


Installation completed


FLASHING YOUR VEHICLE

Your Power Vision 4 comes with one available Flash License. Before you can flash additional vehicles, you will need to purchase additional flash licenses from <https://www.dynojet.com/>.

- 1 Press **Tunes**.
- 2 Select a tune file (.djt) from the list of available Dynojet Tunes or press **Filter** to filter the list of tunes.
- 3 Tap a Filter field and select from the available options to narrow the results.
- 4 Once you have selected your filters, slide the filter screen to the left. Select a tune file from the filtered list.
- 5 Press **Flash Tune**.
Note: Battery must be fully charged or connected to a charger.
- 6 Press **Yes** to use the included Flash License to lock the Power Vision 4 to this vehicle and flash the tune. Do not turn off the key switch or disconnect the Power Vision 4 during the flash.
- 7 Once the flash is completed, turn the key off for at least ten seconds to reset the ECU.

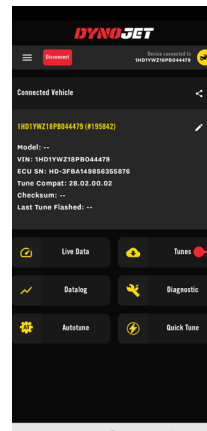


Tunes

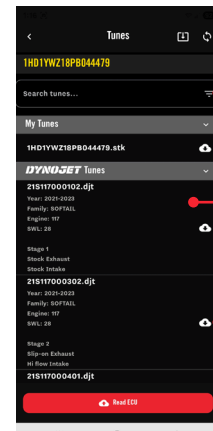


Filter

Choose from available Dynojet tunes


Download the tune to your phone

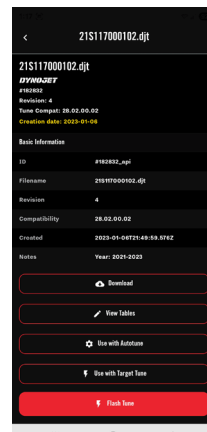


Flash Tune

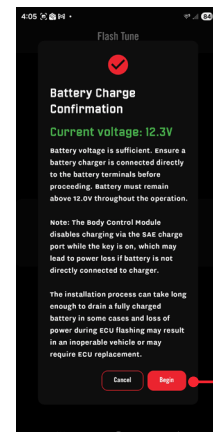

Select Begin to flash tune

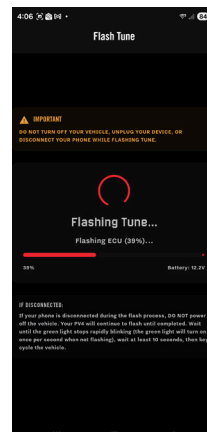

Turn key off to reset ECU

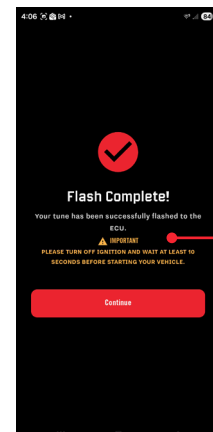


EDITING TUNES WITH POWER CORE



Use Dynojet's Power Core software to edit the ECU tables to improve your riding experience. When you are finished editing, save the tune to the Cloud and use the Dynojet Power Vision 4 App to flash your tune to the vehicle.

- 1 Open the Dynojet Power Core software.
- 2 Open C3 Tuning.
- 3 From the Home ribbon, click **Browse Cloud**. Log in using your Dynojet account login information.

 Note: If you do not already have an account, you will need to create an account to use the Browse Cloud feature. Click **Create Account** and follow the on-screen instructions.




- 4 Using the drop-down arrow, select your vehicle.
- 5 Select the stock file to edit and click **Open**.
- 6 Make your desired changes to the table(s).
- 7 Click **Save As>Save to Cloud as**.
- 8 Enter a name for your tune and click **Save**.
- 9 Enter any important tune notes and click **Save**.
- 10 Return to your phone and refresh the tunes list in the app.
- 11 Select your modified tune and press **Flash Tune**.

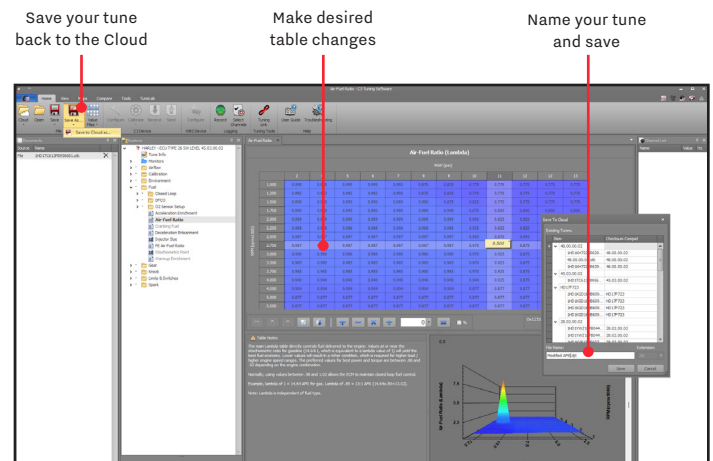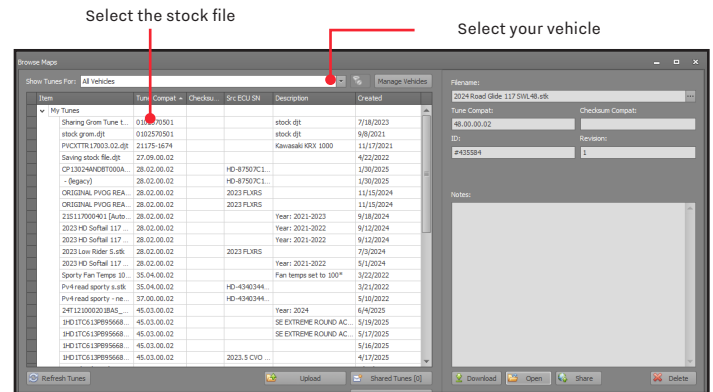

USING QUICK TUNE

Quick Tune allows you to change EEPROM settings stored in the ECU. These settings are stored separately from the flash area where the calibration (tune) is written. Some items may be disabled, but can be unlocked by completing a Dynojet certification course. Flashing an STK file restores Quick Tune items to the value initially read from the ECU.


- 1 Press **Quick Tune**.
- 2 Scroll through the options and make any changes desired.
- 3 Press **Write EEPROM VALUES** to write the new settings back to the ECU.

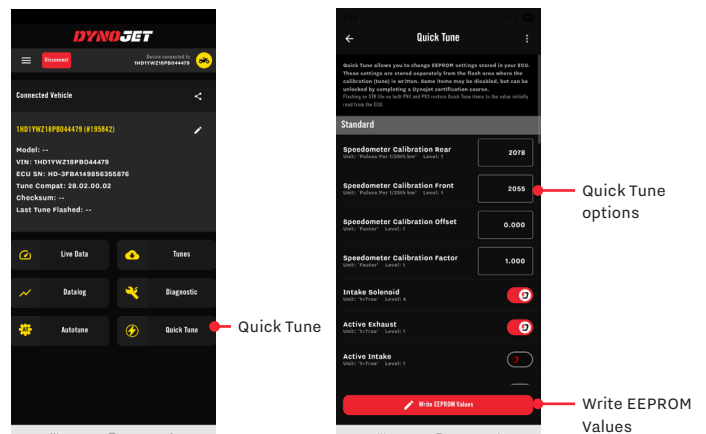

LICENSE MANAGER

View available tokens, redeem and purchase tokens, and download a license to store on your phone for use off line. Your Power Vision 4 comes with one available Flash License. Flash Licenses are transferable. For more detailed information about Dynojet Universal Tokens, refer to <https://www.dynojet.com/dynojet-universal-tokens/>.

- 1 Press **Menu** and press **License Manager**.
- 2 View your available tokens or press **Purchase Tokens** to purchase tokens.
- 3 Press **Download** to download and store your license on your phone.
- 4 Press **Create License** to purchase a license for a vehicle. You will need available tokens to create a license.
- 5 Press **Redeem Universal Tokens** to redeem your tokens for a license.
- 6 If you receive an error when flashing a tune, you may need to purchase tokens before you can flash your tune. Press **Menu** and press **License Manager**.
- 7 Press **Purchase Tokens** to purchase tokens.
- 8 Use the **+** button to increase how many tokens then press **Buy Tokens**.
- 9 Verify and press **Purchase** to complete your purchase. Once your purchase is complete, your tokens will be shown under Available Tokens.

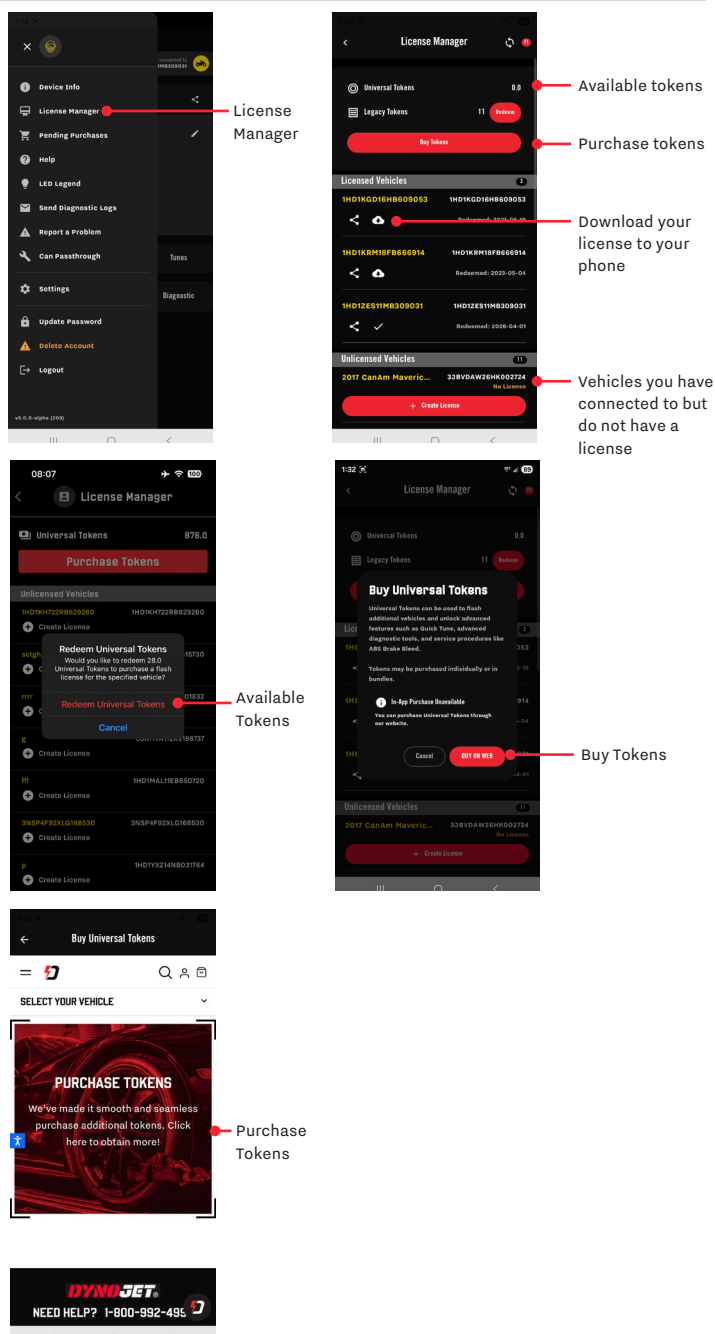

VIEWING LIVE GAUGES

Your Power Vision 4 allows you to configure digital and circular gauges for real time monitoring. The Power Vision 4 must be connected to the vehicle to view live gauges.

- 1 Connect the Power Vision 4 to the vehicle diagnostic port.
- 2 Start the vehicle.
- 3 Press **Live Data**.
- 4 Press the **Record** button to record and save a log file.
Refer to step 19 on page 9.
- 5 Swipe the screen left or right to create and view additional gauge screens.
- 6 Press **+ Add Gauge** to add a gauge.
Note: Gauge options will vary depending on which Data value is chosen.


- 7 Add a circular gauge.
 - Press the **Data** drop-down arrow to view a list of the available options for that field.
 - Press the **Gauge Type** drop-down arrow and select circular.
 - Press the **Min Value** and **Max Value** and use the number pad to enter your values.
 - Press the **Number of ticks** drop-down arrow to view a list of the available options for that field.

- Press the **Multiplier** drop-down arrow to view a list of the available options for that field.
- Press the **Precision** drop-down arrow to view a list of the available options for that field.
- Use the slider buttons to choose a color range.


- 8 Once you have completed your selections, press **Save**.
- 9 Press **Edit** to edit or remove the gauge.

- 10 Add a digital gauge.
 - Press the **Data** drop-down arrow to view a list of the available options for that field.
 - Press the **Gauge Type** drop-down arrow and select digital.
 - Press the **Min Value** and **Max Value** and use the number pad to enter your values.
 - Press the **Multiplier** drop-down arrow to view a list of the available options for that field.
 - Press the **Precision** drop-down arrow to view a list of the available options for that field.
- 11 Once you have completed your selections, press **Save**.
- 12 Press **Edit** to edit or remove the gauge.

8 POWER VISION 4

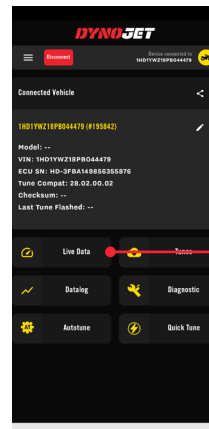


Live Data

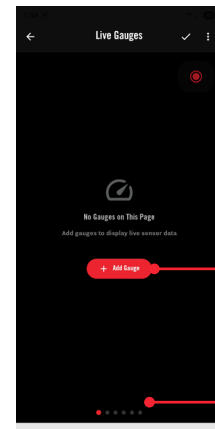

Press Record to record gauges


Press + Add Gauge to add a gauge

Swipe to view more screens

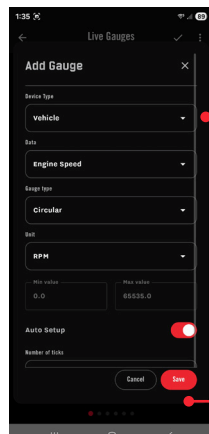


Press the field to view available options

Scroll for additional fields and Add Gauge

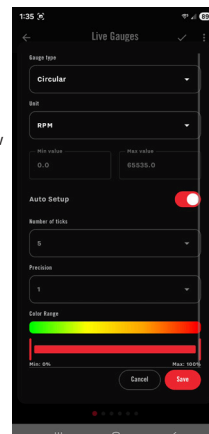


Color Range slider bar
Use your finger to slide the bar from each end

Press Save

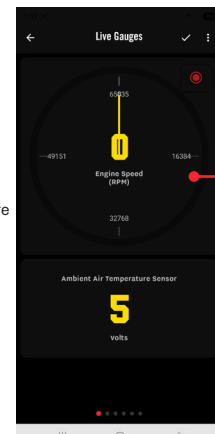


Press Edit to make gauge changes

Circular gauge added

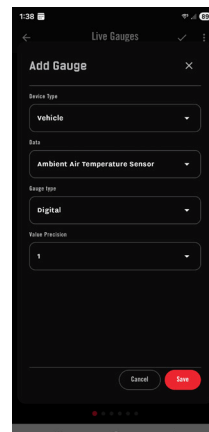

Press the field to view available options

Press Save

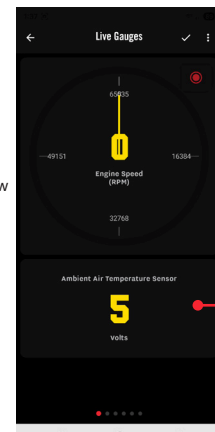

Press Edit to make gauge changes


Digital gauge added

9


VIEWING LIVE GAUGES CONTINUED

Flyout screens and options will vary depending on which Data value is selected. Some examples of the different flyout screens are shown here.


Data and Gauge Type Drop-down Screens: Press the drop-down arrow to view a list of options. Use your finger to scroll through and select an option.

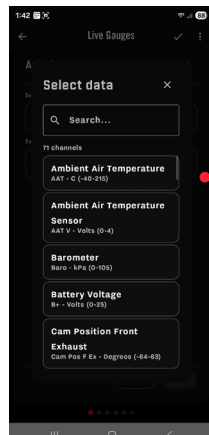

Data drop-down options use your finger to scroll through the list

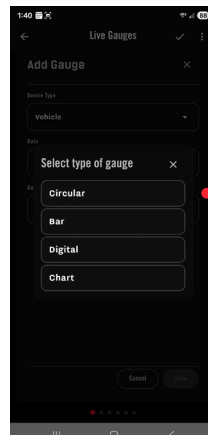

Gauge type drop-down options

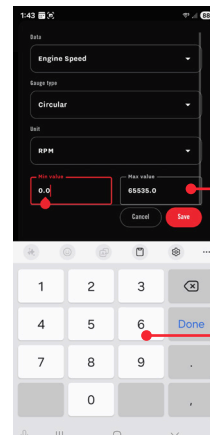

Min/Max value number keyboard


Use the number keyboard to enter your values

Min Value and Max Value keyboard screens: Press the field to bring up a number keyboard. Use your finger to enter your values in the field.


Number of ticks and Multiplier Drop-down Screens: Press the drop-down arrow to view a list of options. Use your finger to scroll through and select an option.

Precision Drop-down Screens: Press the drop-down arrow to view a list of options. Use your finger to scroll through and select an option.


Color Range slider bar Screens: Use your finger to slide the bars left or right to change the color range for the selected gauge.

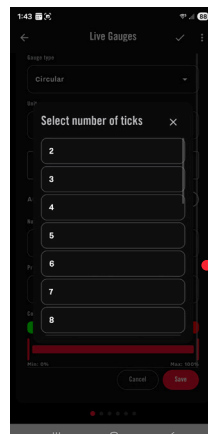

Number of ticks drop-down options

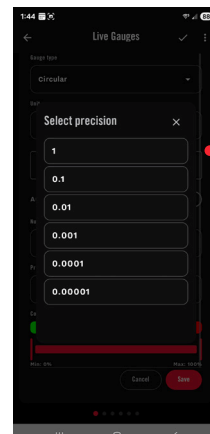

Precision drop-down options

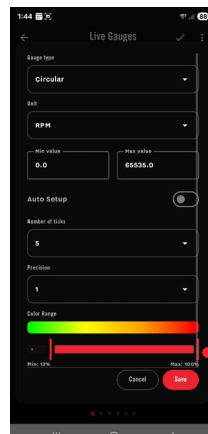


Color Range slider bar use your finger to slide the bar from each end

LOGGING DATA

The Power Vision 4 allows you to log data and view the log using Power Core Software.


- 1 Press **Datalog**.
- 2 Press **Start** to begin logging data.
- 3 Press **Stop** to stop logging.
- 4 Press **Share** to share your log.
Email the log to your computer and open the log using Power Core. Refer to the Power Core Help.
- 5 Swipe to delete the log.

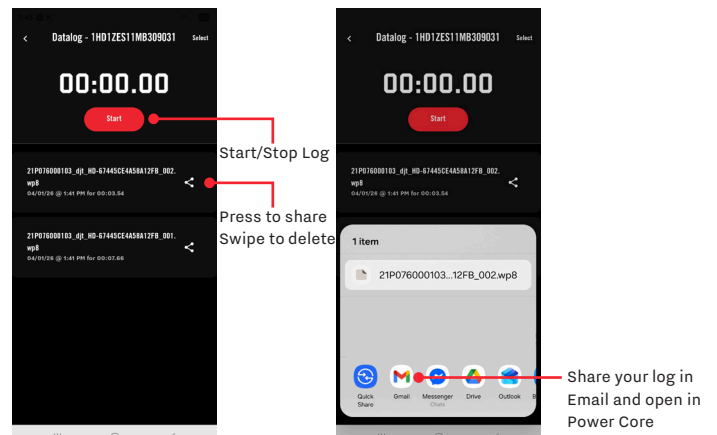

VIEWING THE DIAGNOSTIC CODES


Diagnostics allows you to read and clear diagnostic trouble codes (DTCs).

- 1 Press **Diagnostic**.
- 2 Press **Read DTCs** to read codes.
- 3 Press **Clear DTCs** to clear the codes.
- 4 Press the **Share** button to share your log.
If requested by Dynojet Technical Support, Email the file to pv4hdtech@dynojet.com.

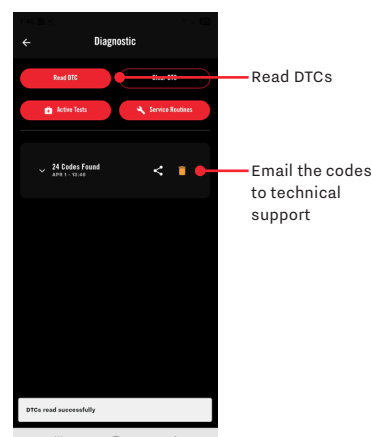

VIEWING ACTIVE TESTS/SERVICE ROUTINES

Active Tests and Service Routines are not available at this time.

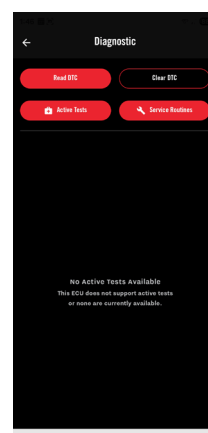


VIEWING THE DEVICE INFORMATION

Device Information allows you to view the Power Vision 4 firmware version, serial number and address, and copy the device information if needed, while Firmware type allows you to toggle between brands of firmware.

Note: Changing the firmware type will require you to use the correct diagnostic cable.

Note: For more information on the Disconnect button, refer to Disconnecting from the Power Vision 4 below.


- 1 Press **Menu** and press **Device Info**.
- 2 Press **Copy device information** to save a copy of the device information to your clipboard.

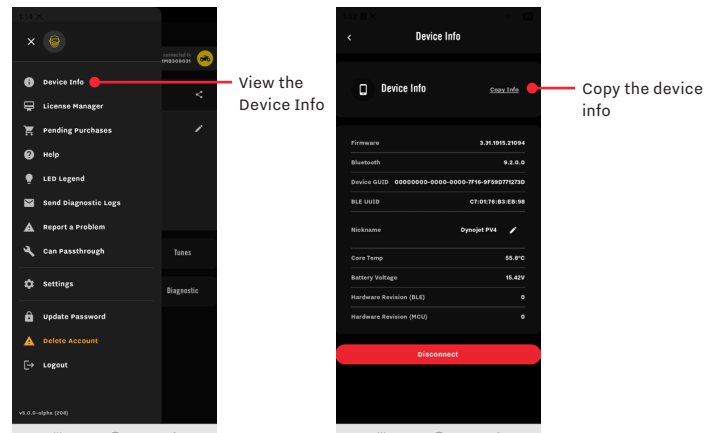

DISCONNECTING FROM THE POWER VISION 4

Manually disconnect from your Power Vision 4 and connect to another device.

- 1 Press **Menu** and press **Device Info**.
- 2 Press **Disconnect**.

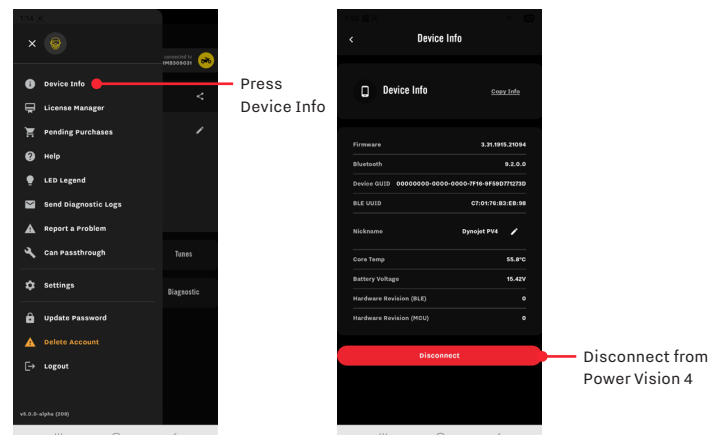

REPORT A PROBLEM

Have questions or need additional support? Email Dynojet's state of the art technical support team.

- 1 Press **Menu** and press **Report a Problem**.
- 2 Fill out your information. You must type in the problem description.
- 3 Press **Submit Feedback**.


Two screenshots of the 'Contact Support' app interface. The left screenshot shows the 'User Information' section with fields for Email, Username (optional), and Existing Ticket # (optional). Below this is the 'Problem Description (MIN 10 CHARS)' section with a text input field. A red dot in the input field is connected by a red line to the text 'Type in the Problem Description'. The right screenshot shows the 'App Information' section with fields for Vehicle Make, Vehicle Model, Vehicle Year, ECU Serial (HD-67445CE4A8BA127B), ECU Part Number, and Installed Time (27P076000103.djt). At the bottom, there are 'Cancel' and 'Submit Feedback' buttons. A red line connects the 'Submit Feedback' button to the text 'Press Submit Feedback'.

INSTALLING THE POWER CORE SOFTWARE

Download the Power Core software and take tuning to a whole new level.

Note: Downloading the Power Core software is optional and not necessary to use the Power Vision.

- 1 Go to <https://www.dynojet.com/>.
- 2 From the top navigation menu, select **Support>Downloads**.
- 3 Click **Power Core Software Download**.
- 4 Double-click the saved file to begin installation. Follow the on-screen prompts. Refer to the Power Core Help in the software for more information.

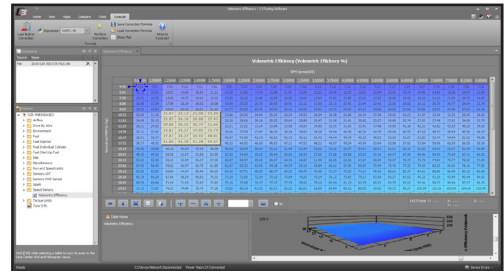

TROUBLESHOOTING

A few of the more common troubleshooting topics are listed below. For additional help, please contact us <https://www.dynojet.com/contact-us/>. Visit the Dynojet Knowledge Base <https://www.dynojetuniversity.com/pages/blog>.

UNABLE TO CONNECT TO BLUETOOTH

- 1 Verify you are within range.
- 2 Turn Bluetooth off and then on again.
- 3 Restart your phone. Restart the Power Vision 4.
- 4 Have your phone “forget” the Power Vision 4.
- 5 Clear the Bluetooth cache.

PHONE WILL NOT CONNECT TO POWER VISION 4

Location permission is required for the app to access the phone's Bluetooth hardware.

- 1 Locate the Dynojet Power Vision 4 app on your phone.
- 2 Long-press the app until the context menu appears.
- 3 Press **App Info** or the ⓘ icon.
- 4 Press **Permissions**.
- 5 Verify Location and Storage are both allowed.

ERROR FLASHING

- 1 Verify the Power Vision 4 app is up to date through either the Apple App Store or Google Play Store.
- 2 Connect the Power Vision 4 to your bike.
- 3 Verify the firmware is up to date.
- 4 Install the firmware update(s) if available.
- 5 Contact <https://www.dynojet.com/contact-us/> if the error persists.

HOW TO RECOVER THE ECU

You may need to recover the ECU if the flash was interrupted leaving the ECU in an incomplete flash state.

- 1 The Power Vision 4 will ask you to recover the ECU. Press **OK**. This will automatically flash the stock (.stk) file.
- 2 If the Power Vision 4 does not automatically flash the stock (.stk) file, you will need to manually choose a stock (.stk) file from your tunes. Ideally, this would be the stock (.stk) file you saved from your initial read.
- 3 Once the ECU is recovered, you will need to re-flash your tune.

HOW TO UPDATE THE FIRMWARE

- 1 Every time you connect to the Power Vision 4, the device automatically checks for new firmware. If newer firmware is found, the Power Vision 4 will ask you to update the device.
- 2 Press **Yes** to update the device.
- 3 You must update the device to continue. If you choose not to update the device, the app will close.

14 POWER VISION 4

HOW TO MANAGE EXISTING FLASH LICENSES

Manage your existing Flash Licenses on the Dynojet website.

- 1 Log in to your <https://www.dynojet.com/> account using the same account you used to log in to the Power Vision 4 app.
- 2 Click **My Account** in the top, right corner of the browser.
- 3 Click **Tune Licenses**.

NO FLASH LICENSE AVAILABLE

Your new Power Vision 4 comes with one available flash license. Before you can flash additional vehicles, you will need to purchase additional flash licenses.

- 1 Log in to your account <https://www.dynojet.com/>.
- 2 Click **My Account>Tune Licenses**. View your purchased licenses. This will also show you which VIN the license file is associated with.
- 3 Purchase additional flash licenses to use with additional vehicles.

HOW TO PURCHASE A FLASH LICENSE

Through a Flash License, you can unlock the true potential of your Dynojet Power Vision 4. Your Power Vision 4 will be able to tune the original vehicle, as well as additional vehicles. Your Power Vision 4 device will remember each license that is applied, essentially multiplying the power of your device.


Each license is vehicle specific, not device specific, allowing you to load a Flash License onto any number of Power Vision units you have.

- 1 Visit <https://www.dynojet.com/digital-products/>.
- 2 Log in to your Dynojet account.
- 3 Select the Flash License for the vehicle you wish to purchase and add to your cart.
- 4 Check out following the prompts.

UNABLE TO LOG INTO MY DYNOJET ACCOUNT

- 1 Verify there is not a typo in your email or password.
- 2 Verify you have entered your full email address. For example, “username@dynojet.com” instead of “username@dynojet.”
- 3 Passwords are case sensitive. Verify caps lock is turned off.
- 4 Refresh your browser and try signing in again.
- 5 Did you forget your password? Click **Forgot my password** and follow the prompts.
- 6 Still having trouble, contact <https://www.dynojet.com/contact-us/>.

INSTALLATION AND USER GUIDE

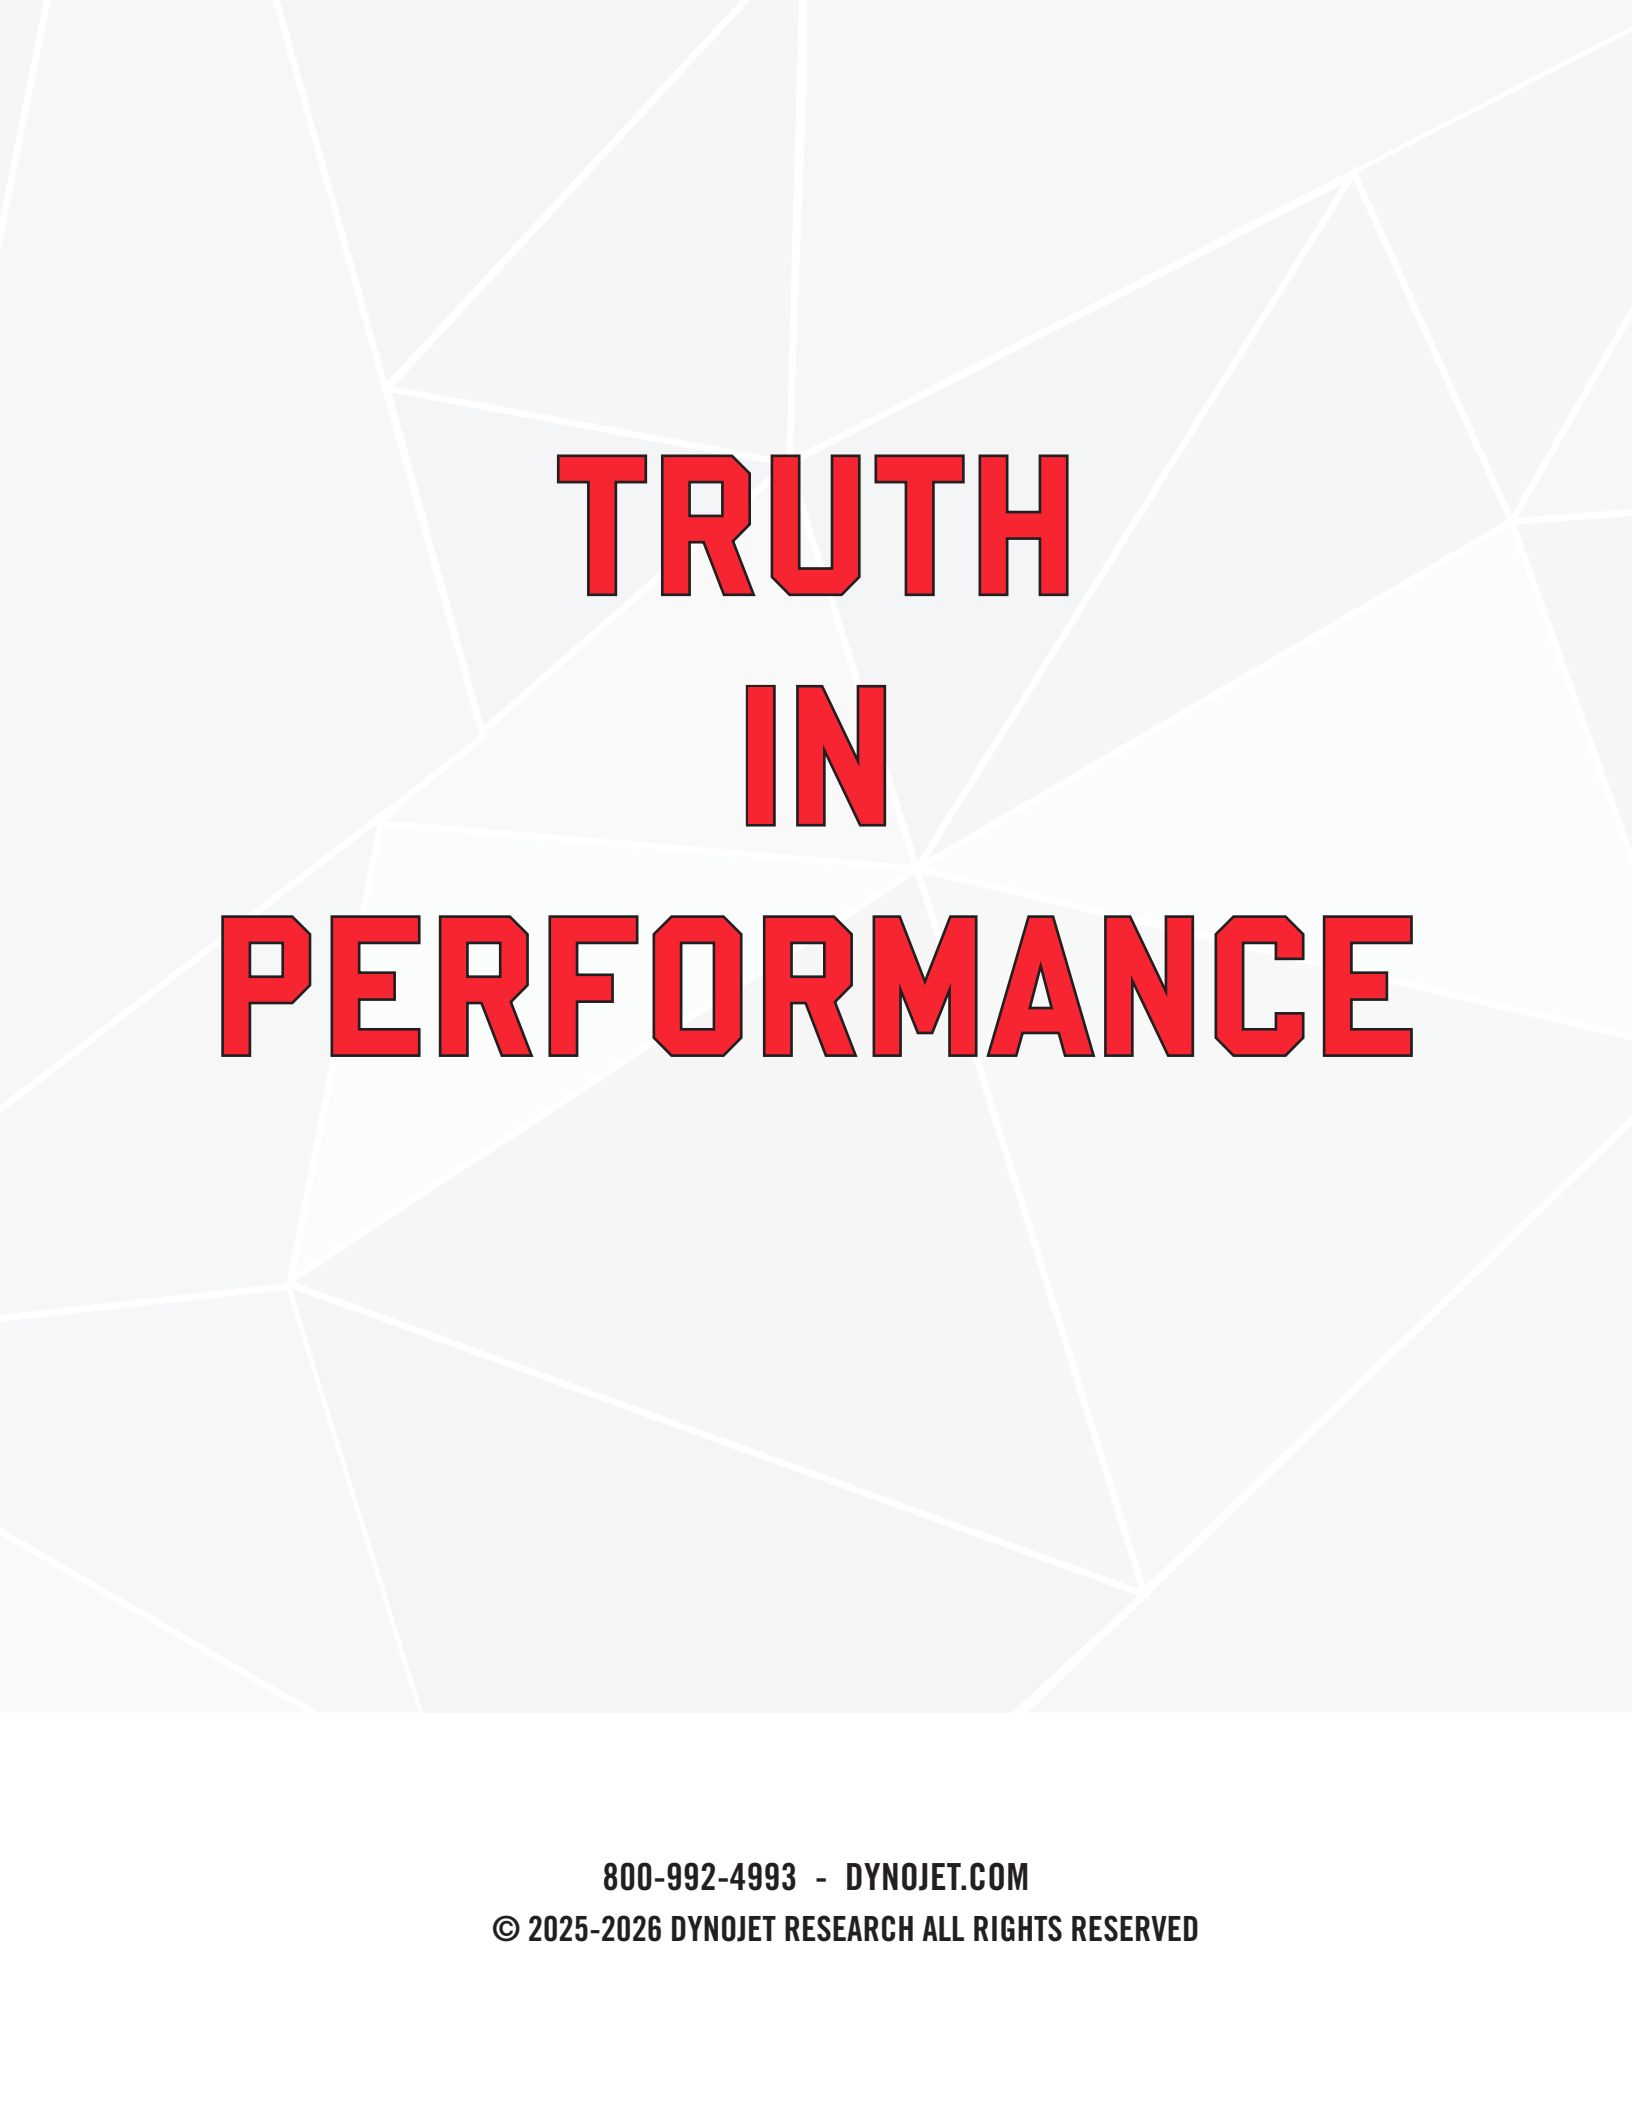

TRUTH IN PERFORMANCE

800-992-4993 - DYNJET.COM

© 2025-2026 DYNJET RESEARCH ALL RIGHTS RESERVED