
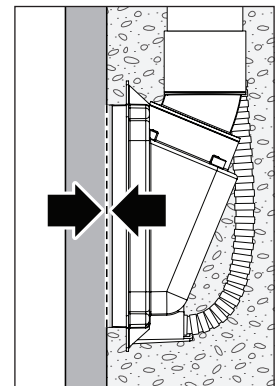
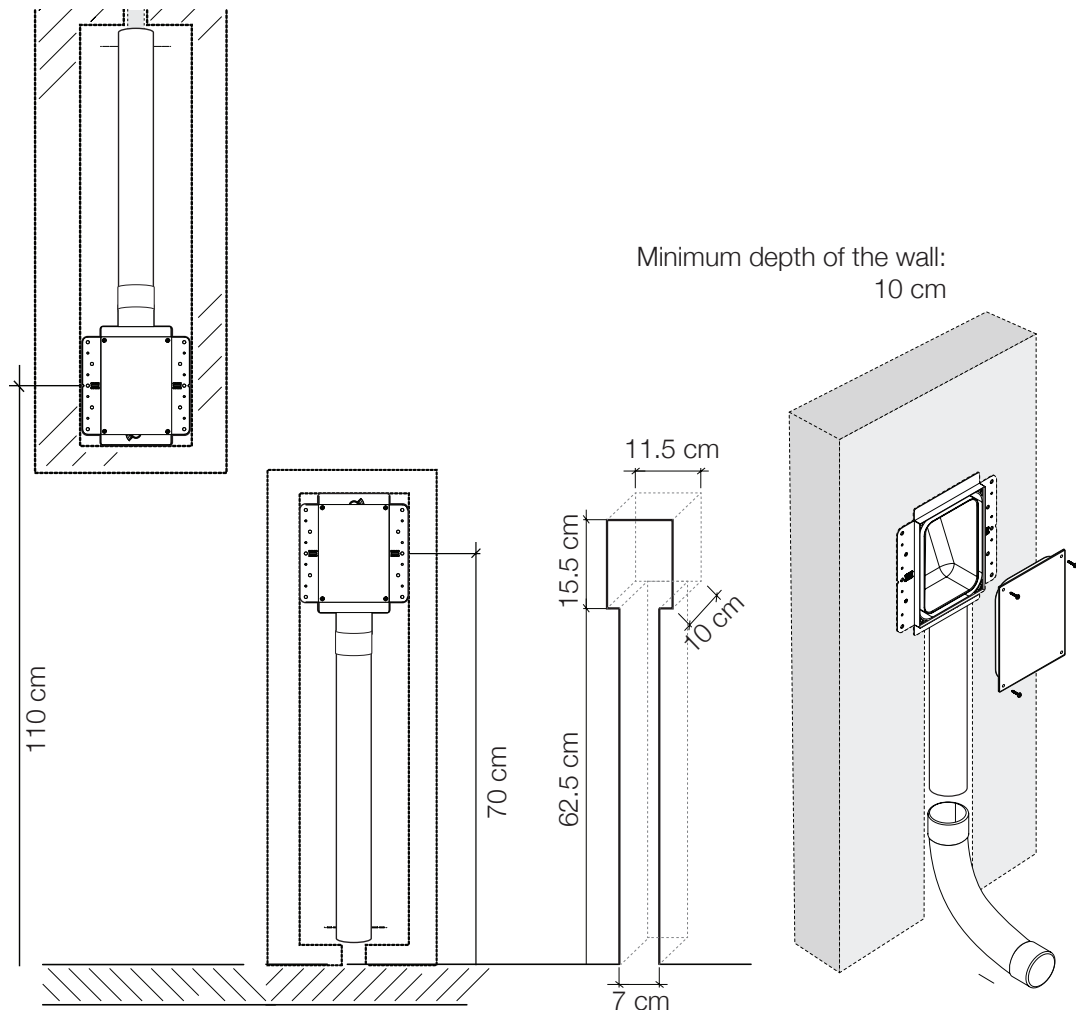


Retraflex®

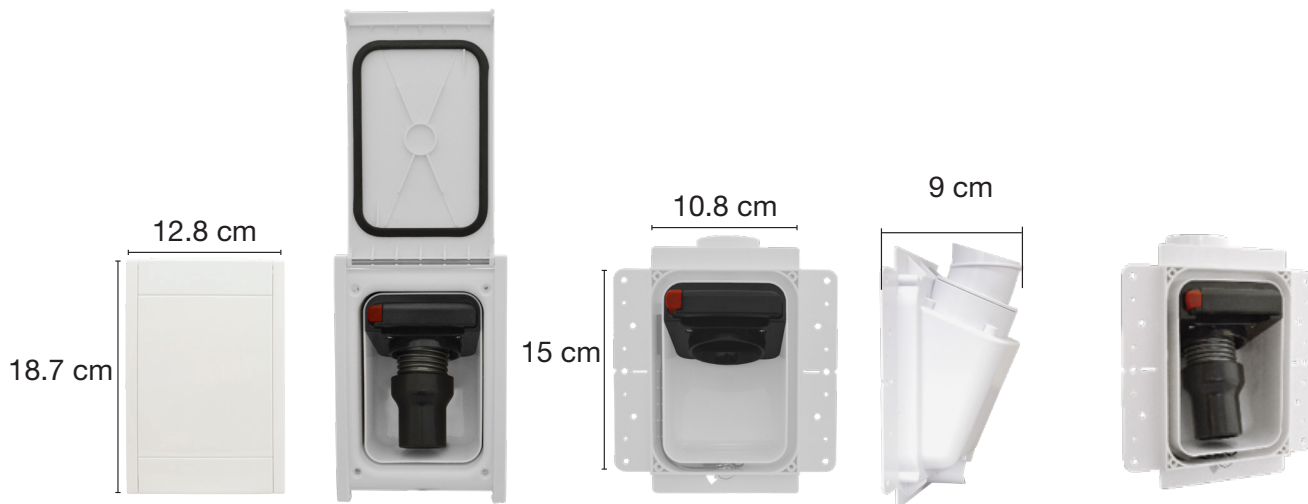

Install the inlet at the required height. Make sure the temporary cover touches the concrete formwork to prevent concrete from seeping in between. Connect the inlet to the piping.

retraflex.com

Tous droits réservés.