

SIDESTAND SWITCH COVER

Harley Davidson Pan America Installation Guide

PARTS LIST



1 SWITCH COVER
1 SCREW, 4X25MM

1 NUT, 6MM

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION




61300098



INSTALLATION

On the left hand side of the motorcycle remove the stock 6mm nut and stock T20 torx bolt.

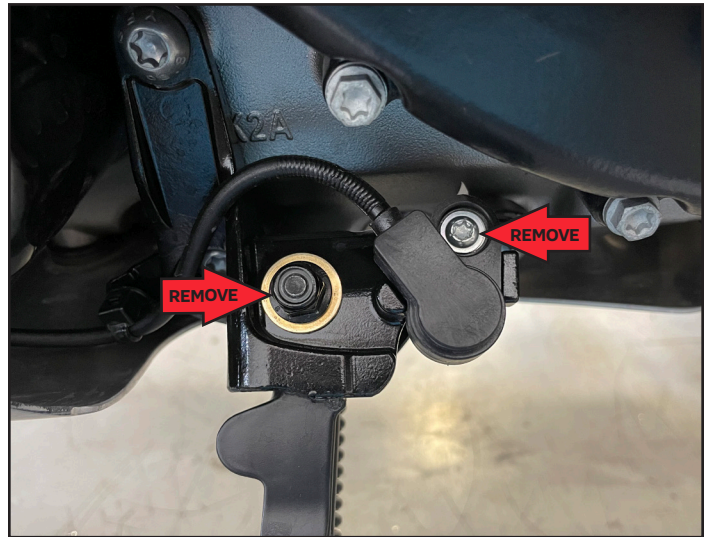

REMOVE STOCK HARDWARE

Install the Dynojet sidestand switch cover using the supplied hardware.

It is recommended to use BLUE loctite on the supplied 4mm allen bolt.



INSTALL USING SUPPLIED HARDWARE



PUSH THE LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM
© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED