

CHAIN BLOCK ADJUSTERS

Harley Davidson Pan America Installation Guide

PARTS LIST



1 CHAIN BLOCK, LH

1 CHAIN BLOCK, RH

2 BOLTS

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION



61300103



INSTALLATION

Position the motorcycle on the center stand or suitable position so the rear of the motorcycle is suspended.

Remove the nut of each stock chain adjuster.
These will be reused.


Remove the rear axle



Slide the supplied bolt thru the swingarm and then insert into the Dynojet LEFT hand chain block adjuster.

Install the stock nut on the bolt.

The LEFT hand side chain block has the extra tang on it. This is there to keep the stock axle from rotating when removing or installing the axle.

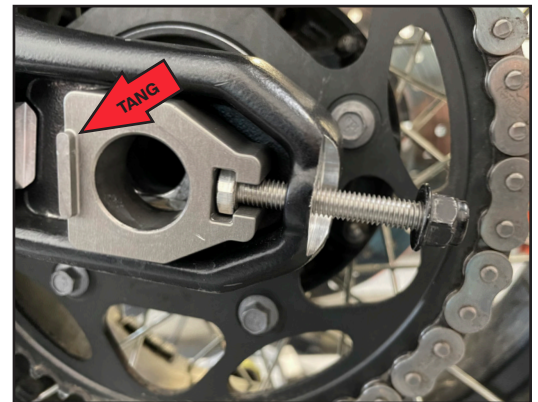


Repeat for the right hand side.

Install the rear axle and adjust the chain per the manual.

Torque the rear axle to 103 ft/lbs.



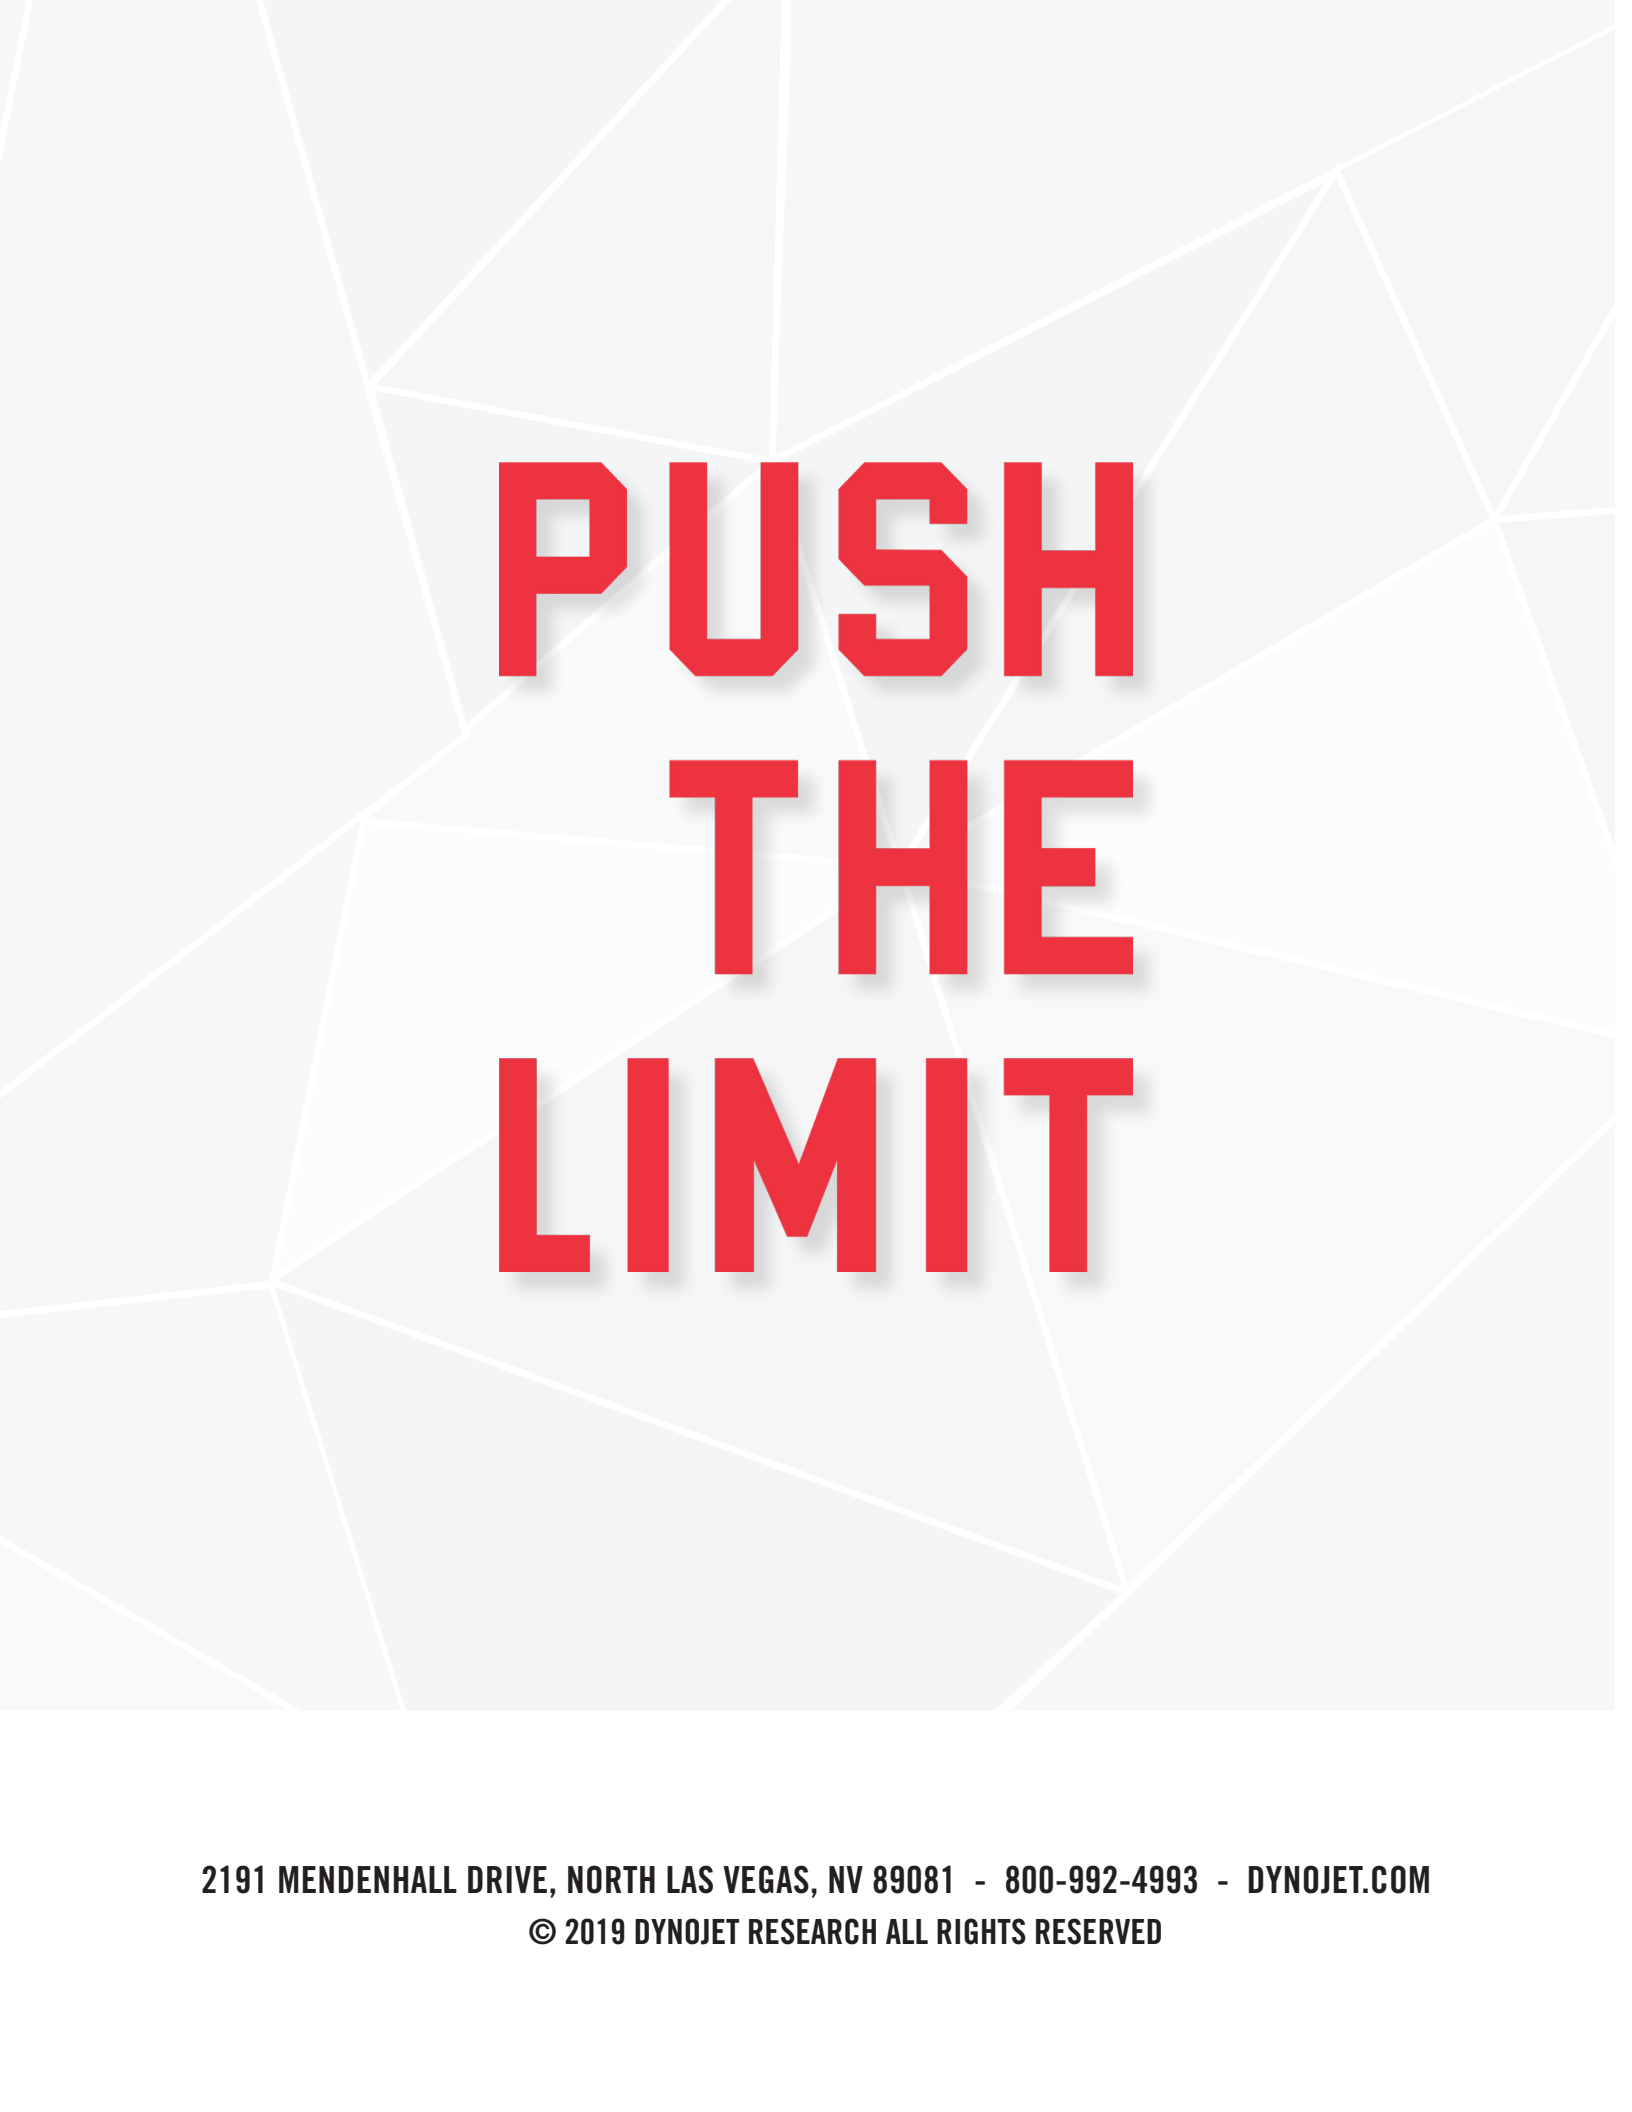

PUSH THE LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM

© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED