

FOLDING SHIFT LEVER

Harley-Davidson Pan America Installation Guide

PARTS AND TOOLS LIST

1 SHIFT LEVER

T30
13MM WRENCH
4MM ALLEN


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

× I61300100.01



INSTALLATION

1. Using the Torx driver and wrench, remove the stock shifter bolt and nut.
2. Remove the stock screw securing the shift linkage to the shifter arm.
3. Remove the shifter/linkage assembly.
4. Remove the linkage from the stock shifter.

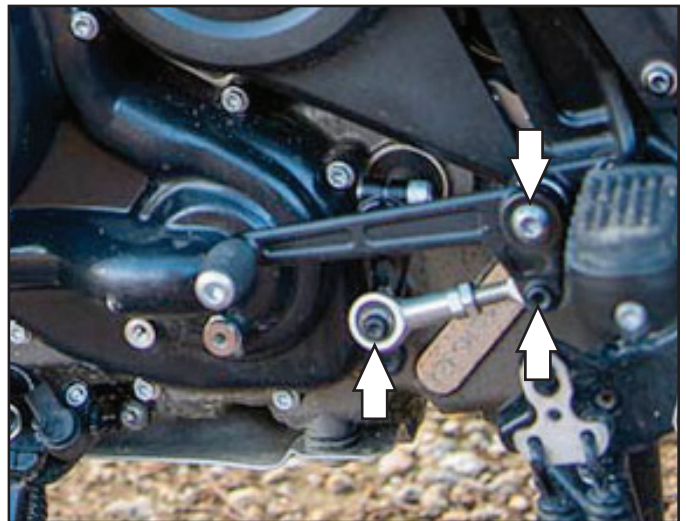


5. Using the Torx driver, install the shift linkage onto the Dynojet shifter.
Be sure to apply Loctite and torque to 8 ft lb (11 Nm).



6. Adjust the shifter tip.
 - a. Loosely install the shifter/linkage assembly.
 - b. Adjust the movable shifter tip to your desired length.
 - c. Remove the shifter/linkage assembly.
 - d. Using the Allen wrench, install the shifter tip. Be sure to apply Loctite to the bolt securing the tip and torque to 8 ft lb (11 Nm).
7. Reinstall the stock screw securing the shift linkage to the shifter arm.
8. Reinstall the stock shifter bolt and nut and torque to 19 ft lb (26 Nm).



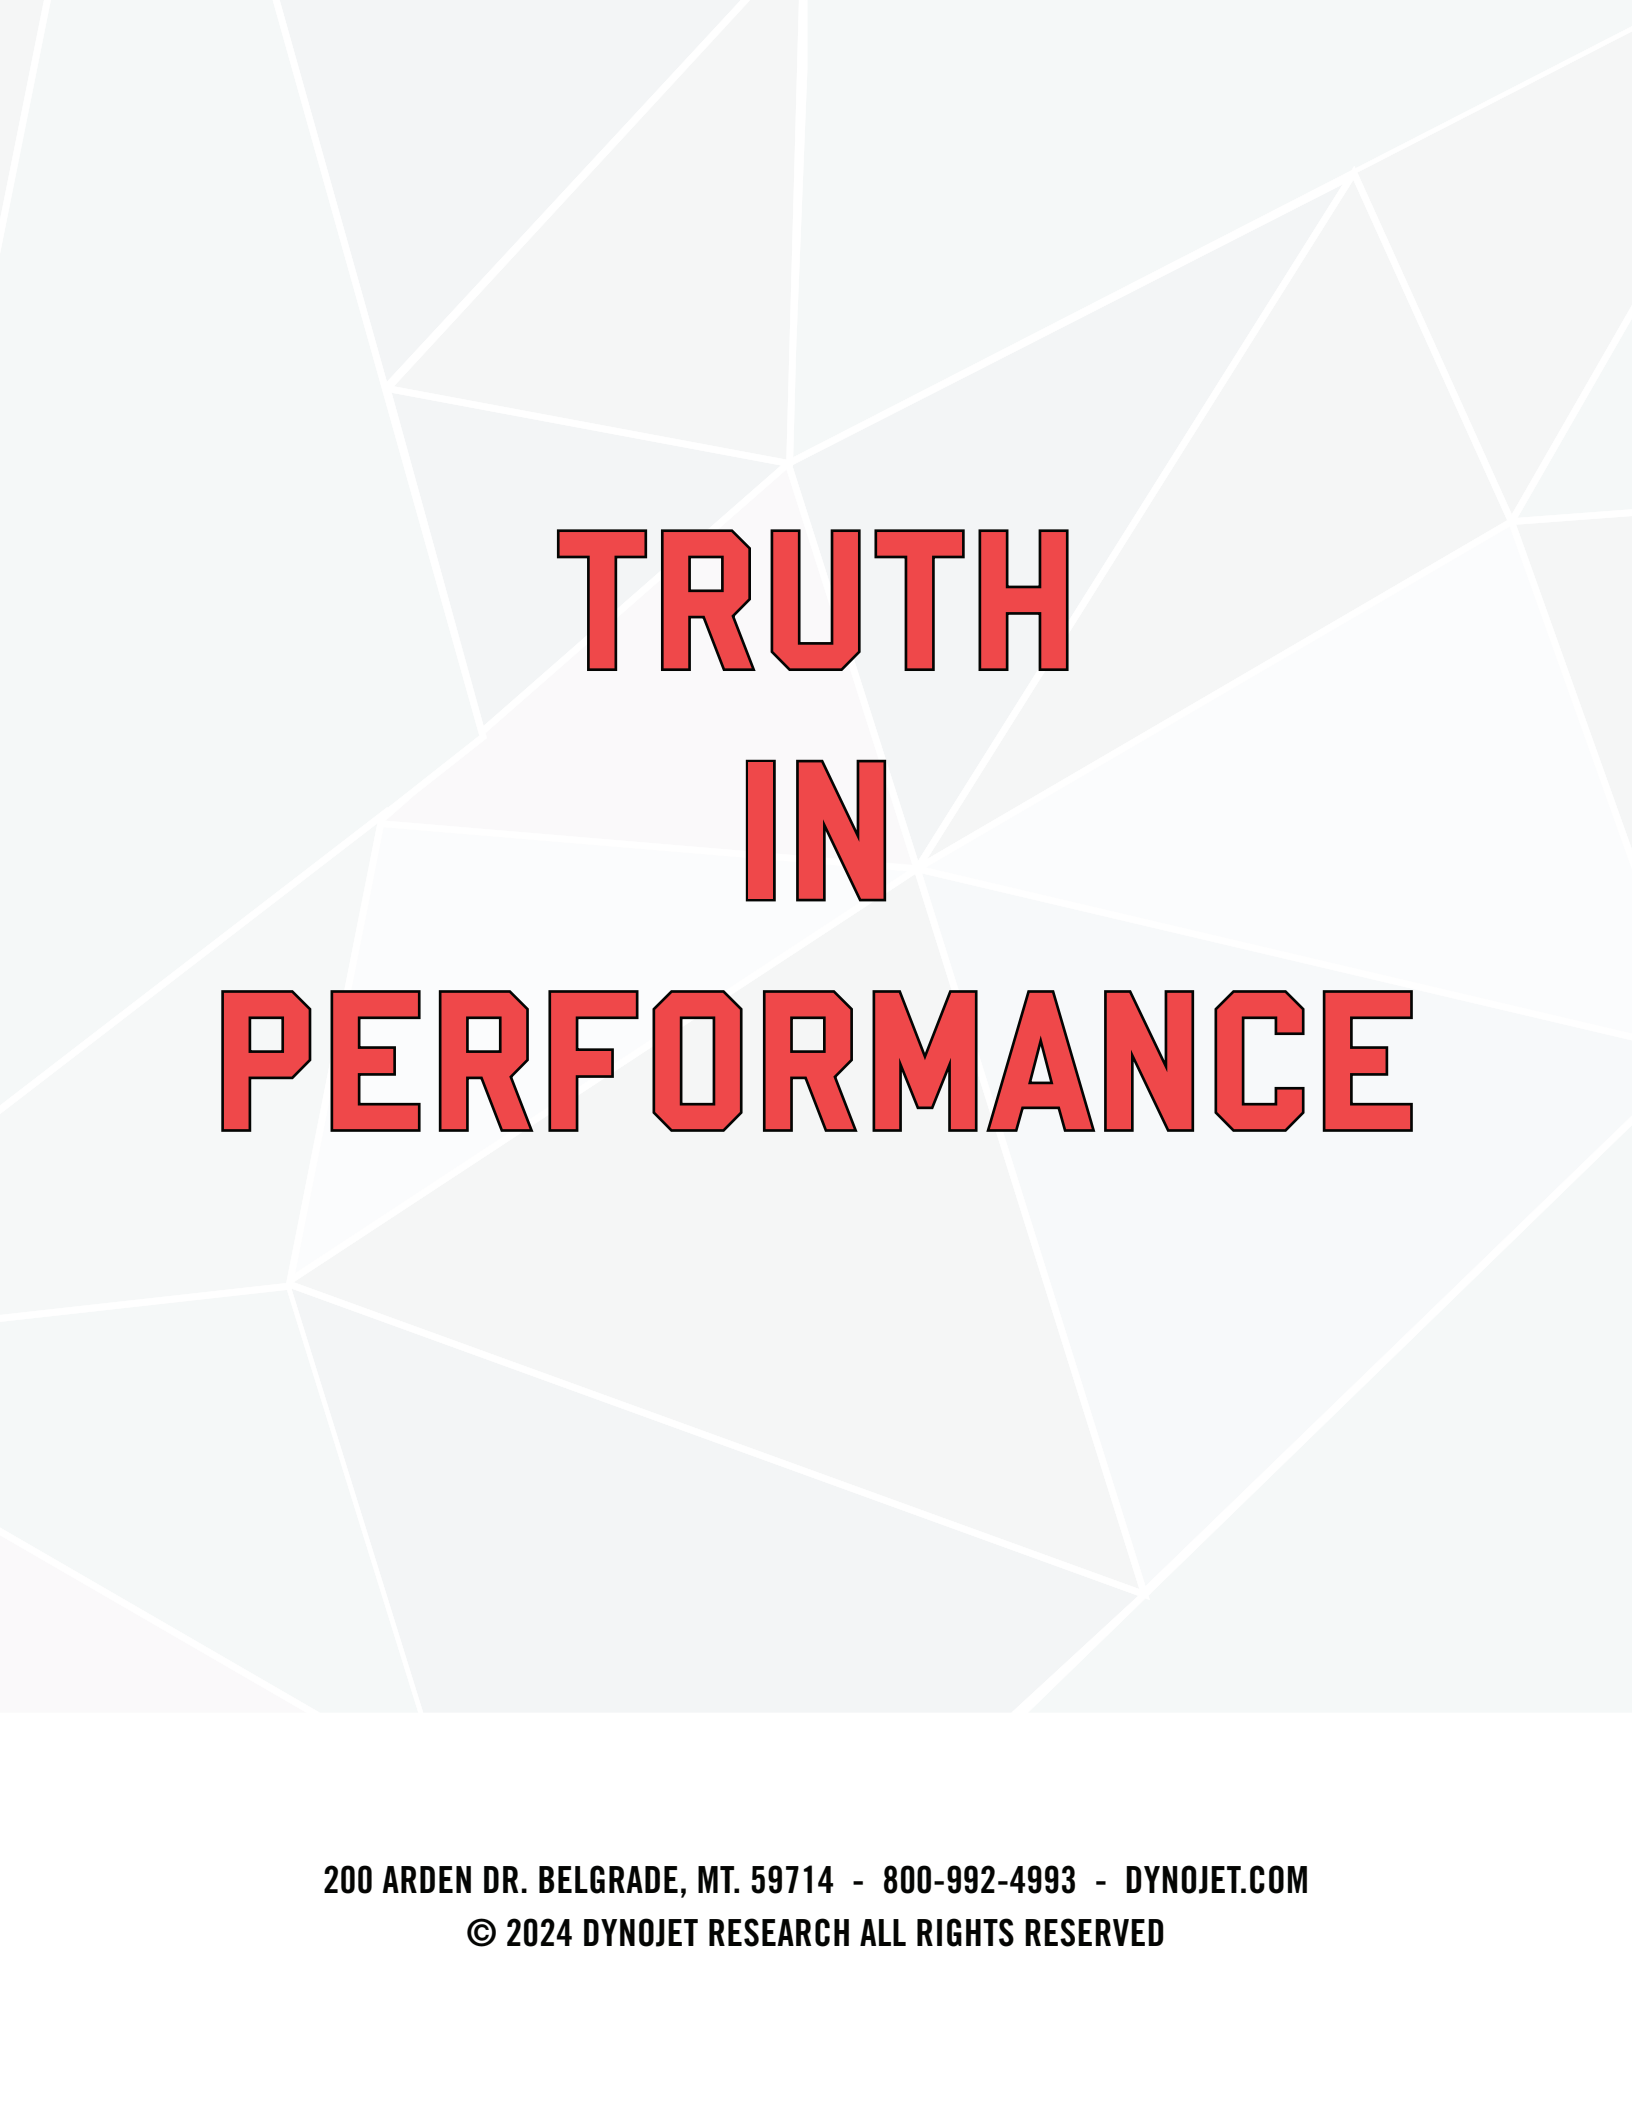

TRUTH IN PERFORMANCE

200 ARDEN DR. BELGRADE, MT. 59714 - 800-992-4993 - DYNOJET.COM
© 2024 DYNOJET RESEARCH ALL RIGHTS RESERVED