

RR BRAKE PAD EXTENSION

Harley Davidson Pan America Installation Guide

PARTS LIST



1 PAD, UPPER
1 PAD, LOWER

2 BOLTS
12 SET SCREWS

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION




61300099



INSTALLATION

Position the stock rear brake lever pad in the HIGH position.

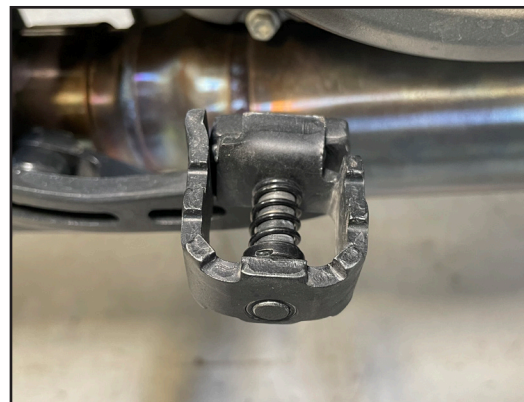

Install the supplied set screws into each hole of the UPPER pad.

These are self locking so no loctite is needed. Install them until they fully seat.



Install the Dynojet UPPER pad into the stock pad and then secure to the lower pad using the supplied bolts.

It is recommended to use loctite on these bolts.



HIGH POSITION



LOW POSITION



PUSH THE LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM
© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED