

Harley Davidson Pan America Installation Guide

1	COVER	2	BOLTS, 6X45MM
1	BRACKET	2	BOLTS, 6X16
2	SPACERS	2	NUTS, 6MM

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

✖ 61300097


The LEGO logo is displayed vertically. The word "LEGO" is in a bold, black, sans-serif font. The word "BRICKS" is in a bold, red, sans-serif font. The letters are slightly tilted to the right. A small registered trademark symbol (®) is located at the top right of the "LEGO" text.

INSTALLATION

Unplug the stock wiring harness from the stock ignition coil.




Remove the stock ignition coil by unplugging the coil wires and removing the 2 stock bolts.

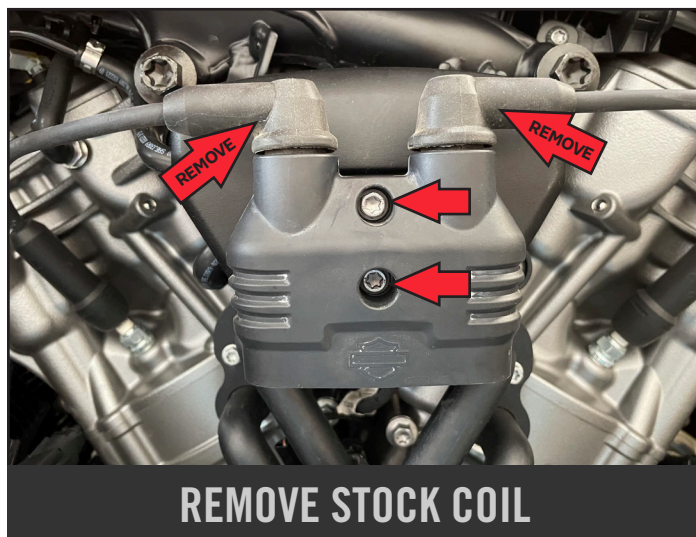


Remove the stock bolts on the ignition coil bracket. There are 2 bolts on each side.

These bolts will be reused.

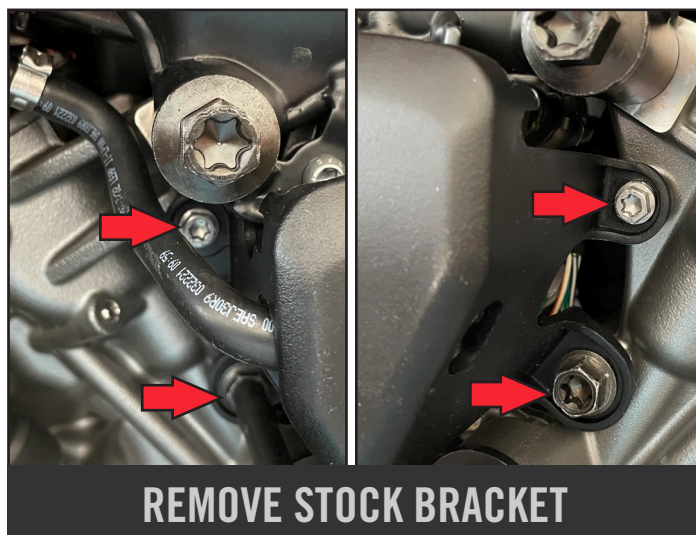


INSTALLATION

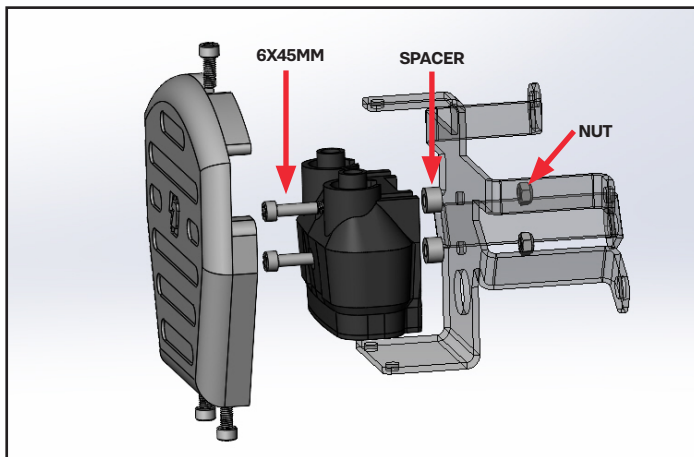


INSTALL COIL TO BRACKET

Using the supplied hardware install the stock ignition coil to the Dynojet bracket.

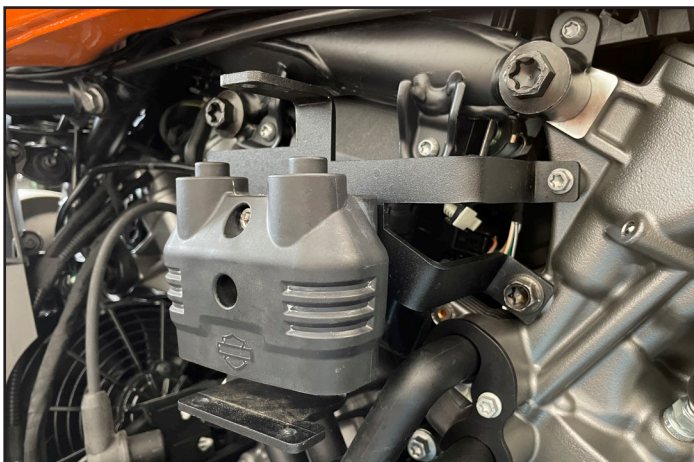

INSTALL BRACKET

Using the stock hardware install the Dynojet coil bracket to the motorcycle.

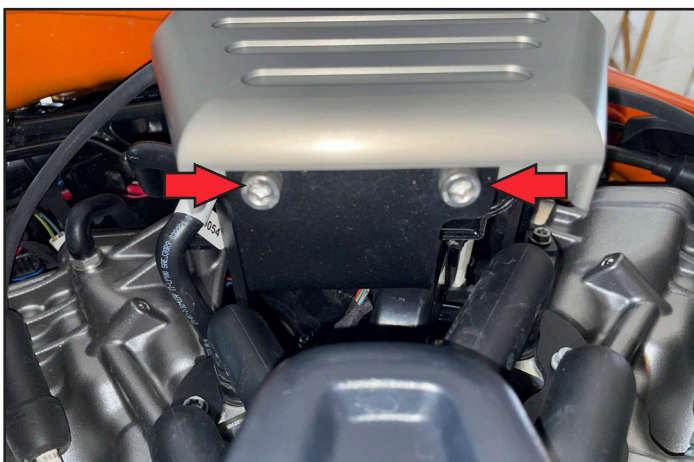

INSTALL COIL COVER

Install the Dynojet ignition coil cover to the bracket using the supplied 6x16mm bolts.

There are 2 bolts at the bottom and 1 at the top. It is recommended to use loctite on these bolts.



PUSH THE LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM
© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED