COBRA® 23801 E. La Palma Ave., Yorba Linda, Ca 92887 Ph. 714.692.8180 Fax. 714.692.5016

www.cobrausa.com

Items Supplied >

1 - Sissy Bar w/ Pad
2 - Mount Brackets (Left/Right)
4 - 3/8-16 x 1¼ Buttonhead Bolts
4 - Spacers
4 - M8 x 16mm Buttonhead Bolts

Application(s) >


HARLEY	
FLSTF	2000-2006
FXST/S/B	2000-2005

Instruction Manual >

602-1100 / 602-1150 / 602-1200

Read all instructions carefully before installing your new Cobra® product!

1. Remove and discard the (2) 3/8 bolts/washers from the right side fender rail. Do NOT remove the chrome fender rail.
2. Install right sissybar mounting bracket (part # facing inward) by inserting (2) supplied 3/8-16 x 1¼ buttonhead bolts through the sissy bar mount bracket, supplied spacers, chrome fender rail and into the fender nut plates. **DO NOT TIGHTEN AT THIS TIME.**
3. Repeat Steps 1 & 2 on left side.
4. Install the sissy bar between the brackets using the four (4) supplied M8 x 16mm button head bolts.
5. Align sissy bar and torque all bolts to their appropriate values.

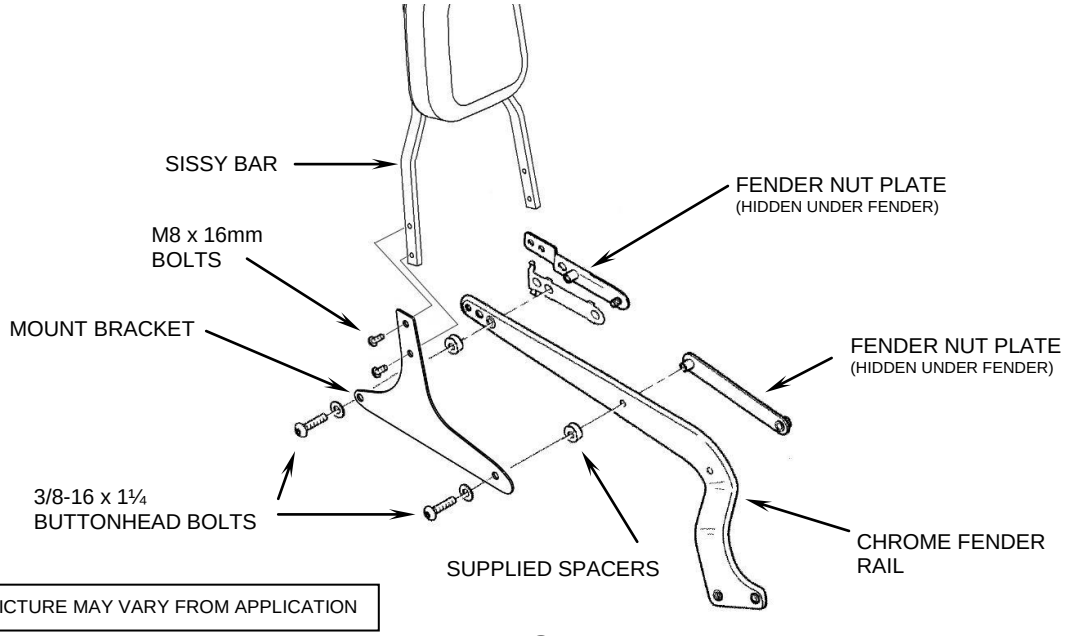

PICTURE MAY VARY FROM APPLICATION

FIGURE 1
(RIGHT SIDE SHOWN)

DECORATIVE BACKREST INSERTS AVAILABLE AT **COBRAUSA.COM** OR YOUR LOCAL COBRA DEALER

**** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.***

DOCUMENT NO. 0017 REV. B
04/12

Anything's Possible®